

MOTOR SWITCH POSITIONS

WITH "W" RELAY

MOTOR A1 (S-POS.) {
 INSIDE SW. - RESETS SCORING UNITS.
 SECOND SW. - ADDS PLAYER UNIT
 THIRD SW. - SCORING.

MOTOR 1B SW. - ACTUATES "QB" RELAY.

MOTOR 1C (S-POS.) {
 INSIDE SW. - MOTOR RUNOUT.
 SECOND SW. - OPENS CIRCUIT TO BALL RETURN AND TROUGH SWITCHES.
 THIRD SW. - INSURES GAME OVER.
 FOURTH SW. - OPENS CIRCUIT TO TARGET BANK SWITCHES.
 FIFTH SW. - SPECIAL FREQUENCY CONTROL.
 SIXTH SW. - OPENS CIRCUIT TO COIN CHUTE SWITCHES, REPLAY BUTTON & COIN LOCKOUT.

MOTOR 1D {
 INSIDE SW. - COIN CHUTE CREDIT TOTALIZER.
 SECOND SW. - BONUS SCORE CONTROL.
 THIRD SW. - 1ST. PLAYER MATCH.

MOTOR 4A {
 INSIDE SW. - RESETS SCORING UNITS.
 SECOND SW. - ACTUATES "LB" RELAY.

MOTOR 4B {
 INSIDE SW. - COIN CHUTE CREDIT TOTALIZER.
 SECOND SW. - 2ND. PLAYER MATCH.

MOTOR 4C (S-POS.) {
 INSIDE SW. - COIN CHUTE CREDIT TOTALIZER.
 SECOND SW. - SUBTRACT BONUS UNIT.
 THIRD SW. - ACTUATES BALL RETURN COIL.
 FOURTH SW. - RESETS CONTROL BANK & TARGET BANK.

MOTOR 2B {
 INSIDE SW. - "O", "B", "X", "S" & "W" RELAY LOCKINS.
 SECOND SW. - "E", "D", "I" & "U" RELAY LOCKINS.

MOTOR 2C (L-POS.) {
 INSIDE SW. - COIN CHUTE CREDIT TOTALIZER.
 SECOND SW. - SUBTRACT REPLAYS, ADDS TOTAL PLAY METER, ACTUATES "PB" & "SB" RELAYS.
 THIRD SW. - ADDS PLAYER UNIT & ACTUATES "XB" RELAY.

MOTOR 3B SW. - BONUS SCORE CONTROL.

MOTOR 3E SW. - SPECIAL FREQUENCY CONTROL SWITCH.

MOTOR 3½ B. - BRAKE.

