## KISMET COIL CHART

NUMBER	DESCRIPTION	LOCATION
15-6764 X-1 14-6738 A 14-7740	TRANSFORMER SCORE MOTOR TARGET MOTOR	MECH. PANEL MECH. PANEL PLAYFIELD
	SOLENOID COILS	
A 25-950	REPLAY UNIT STEP UP	INSERT
A 26-1100	MATCH UNIT STEP UP PLAYER UNIT STEP UP COIN UNIT STEP UP BALL COUNT UNIT STEP UP SELECTION UNIT STEP UP	INSERT INSERT MECH. PANEL MECH. PANEL FLAYFIELD
A 2-26-1100	KNOCKER COIL	CABINET
A 2-26-1350	LARGE BELL SMALL BELL	CABINET .
A 30-2760	BALL RELEASE COIL	BALL TROUGH
B 29-1600	REPLAY UNIT RESET PLAYER UNIT RESET BALL COUNT UNIT RESET COIN UNIT RESET SELECTION UNIT RESET	INSERT INSERT MECH, PANEL MECH, PANEL PLAYFIELD
D 22-1150	BANK RESET COIL	PANEL
DU 26-1350	SCORE DRUM UNIT COILS . (12 REQ'D.)	INSERT
FL 25-930/31-600	FLIPPER COILS (Z REQ'D.)	PLAYFIELD
G 25-1100	JET BUMPER COILS (3 REQ'D.)	PLAYFIELD
G Z6-1400	KICKER COILS (2 REQ'D.)	PLAYFIELD
-	RELAY COILS	
IT 30-1500	TILT TRIP RELAY	MECH. PANEL
M 32-1800	ADVANCE RELAY NO. 1 BUMPER NO. 2 BUMPER 1st & 2nd PLAYER SCORE RESET RELAY 3rd & 4th PLAYER SCORE RESET RELAY	PLAYFIELD PLAYFIELD PLAYFIELD INSERT INSERT
M 33-2800	RIGHT BOTTOM BUMPER RELAY LEFT BOTTOM BUMPER RELAY LEFT TOP BUMPER RELAY RIGHT TOP BUMPER RELAY HIGH SCORE SET UP RELAY 100 POINT SET UP RELAY 50 POINT SET UP RELAY	PLAYFIELD PLAYFIELD PLAYFIELD PLAYFIELD PLAYFIELD PLAYFIELD PLAYFIELD
M 36-5500	25¢ RELAY	MECH. PANEL
E 32-1800	1 PT. RELAY 10 PT. RELAY 100 PT. RELAY	INSERT INSERT INSERT
Z 30-1800	RESET RELAY OUTHOLE RELAY START RELAY OUTHOLE INDEX RELAY PLAYER RESET RELAY TILT LATCH RELAY 50 POINT RELAY ROLLOVER RELAY	MECH, PANEL
Z 31-2300	LOCK RELAY	MECH. PANEL
Z 35-4200	COIN RELAY	MECH. PANEL
2 3 3 1 1 1 1	RELAY BANK COILS	
X 30-1000	RELAY BANK COILS (17 REQ'D.)	MECH. PANEL