# SAN FRANCISCO

#### ADJUSTMENT SHEET


TO MAKE GAME MORE CONSERVATIVE - MOVE POSTS 3/16", AS SHOWN IN SKETCH. SPOTTING HOLES ARE PROVIDED AND CAN BE SEEN ON REMOVAL OF POSTS.

## NUMBER MATCH ADJUSTMENTS,

located in back box. Can be set for 2-5 or 10 replays (as indicated on adjustment tag) for both players matching last number in point score to number that appears on back glass when game is over.

### NO. MATCH ON-OFF JACK,

located in back box. When plug is in 'ON' position, number match will pay 10% or 1 game in 10 for one player matching last number in point score to number that appears on back glass when game is over. In 'OFF' position, match lites will not lite on completion of game.

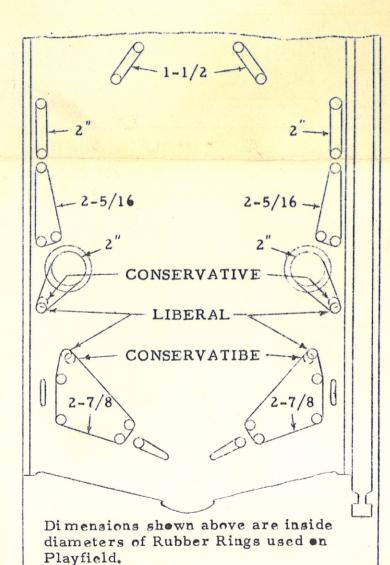

# 3-5 BALL ADJUSTMENT JACK,

located on back box. This jack changes play from 3 to 5 ball or vice versa, use corresponding number of balls.

## 25¢ ADJUSTMENT JACK,

located on panel, will provide -2-3-4 or -5 plays for 25¢. Insert phone tip in female jack opposite the number of plays required.

### THE POWER TRANSFORMER,

located on panel, is equipped with a secondary tap. If your game is on location with extremely low line voltage, remove lead from lug marked 24 volt and solder to alternate lug marked 'HIGH'. This will boost secondary voltage by approximately 4 volts.

### LEG LEVELERS,

are provided for two purposes - 1st to level game on location, 2nd to increase pitch for game percentaging If it is desired to speed up play or decrease scores, raise rear leg levelers to increase pitch.