

"BEAT TIME"

EXTRA BALL AND REPLAY ASJUSTMENT SWITCH

THE EXTRA BALL REPLAY ADJUSTMENT SWITCH IS LOCATED IN THE BACK BOX.

REPLAY POSITION:                      SPECIAL ON PLAYFIELD AND HI-SCORE REGISTER REPLAYS.

EXTRA BALL POSITION:                SPECIAL ON PLAYFIELD AND HI-SCORE REGISTER EXTRA BALL.

WHEN PLAYING GAME IN "EXTRA BALL" POSITION, THE FOLLOWING STEPS SHOULD BE TAKEN:

1. SET NUMBER MATCH "ON-OFF" PLUG (LOCATED IN BACK BOX) TO THE "OFF" POSITION.
2. REMOVE THE NUMBERED REEL FROM THE REPLAY UNIT AND APPLY THE REPLAY WINDOW MASK.
3. REMOVE SCORE CARDS FROM BOTTOM ARCH AND REPLACE WITH APPROPRIATE "EB" (EXTRA BALL) CARDS.
4. PLUG IN CORRESPONDING NUMBERS IN BACK BOX FOR EXTRA BALLS ON HI-SCORE, AS INDICATED ON "EB" CARDS.
5. THE GAME IS NOW READY FOR CHECKOUT. AN EXTRA BALL WILL BE GIVEN IN PLACE OF REPLAYS. A MAXIMUM OF ONE EXTRA BALL FOR EACH BALL BEING PLAYED. WHEN EXTRA BALL IS MADE, A LITE AT THE BOTTOM OF GAME INDICATES "SAME PLAYER SHOTS AGAIN". A LITE IN THE BACK BOX ALSO LIGHTS, LIGHTING UP "SAME PLAYER SHOTS AGAIN".
6. GAMES EQUIPPED WITH DOUBLE COIN CHUTE AND 25¢ RELAY WILL NOT BE AFFECTED BY THE CONVERSION. CREDITS FOR THE 25¢ COIN WILL BE ADDED IN THE CONVENTIONAL MANNER.