


TEN SPOT

ADJUSTMENT SHEET

PROJ. NO. 250

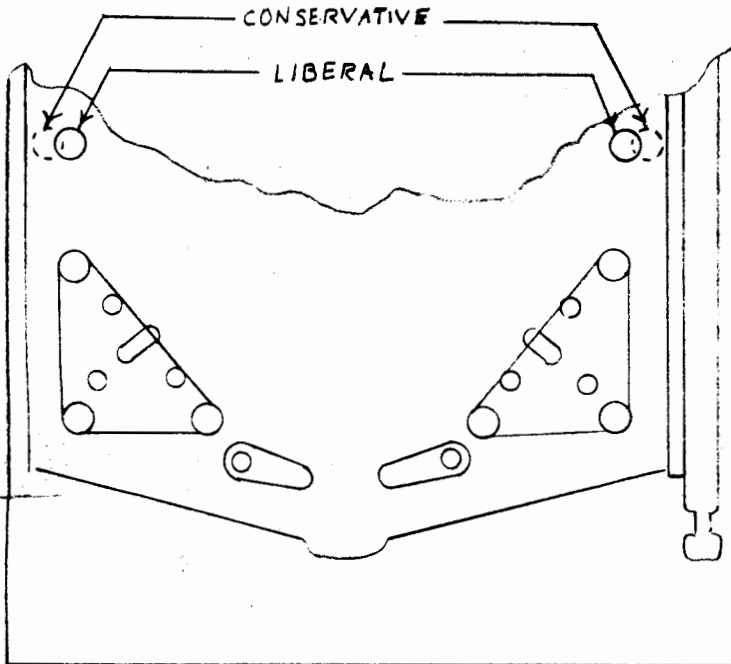

THIS GAME IS DESIGNED FOR 3 OR 5 BALL PLAY. ADJUSTMENT JACK LOCATED IN BACK BOX. BE SURE TO USE ONLY 3 BALLS WHEN ADJUSTED FOR 3 BALL PLAY.

TO MAKE GAME MORE CONSERVATIVE - MOVE POST $3/16$ ". AS SHOWN IN SKETCH.

SPOTTING HOLES ARE PROVIDED AND CAN BE SEEN ON REMOVAL OF POSTS.

NO. MATCH ON-OFF JACK, located in back box. When plug is in 'on' position no. match will pay 10% or 1 game in 10. In 'off' position - match lites will not lite on completion of game.

25¢ ADJUSTMENT JACK, located on panel, will provide -2-3-4 or -5 plays for 25¢. Insert phone tip in female jack opposite number of plays required.

THE POWER TRANSFORMER, located on panel, is equipped with a secondary tap, which is brought out to fuse block for adjustment purposes. If your game is on location with extremely low line voltage, take fuse out of fuse clip marked normal line and place in clip marked low line. This will boost secondary voltage by approx. 5 volts.

LEG LEVELERS, are provided for two purposes - 1st to level game on location, 2nd to increase pitch for game percentaging. If it is desired to speed up play or decrease scores, raise rear leg levelers to increase pitch.