

**SCORE CARDS ARE LISTED FROM LIBERAL TO CONSERVATIVE
CARDS MARKED * ARE RECOMMENDED**

3 BALL PLAY

A-11192 (1800, 2200, 2600, 3000)
 A-11193 (1900, 2300, 2700, 3100)
 A-10863 (2000, 2400, 2800, 3200)
 *A-10864 (2100, 2500, 2900, 3300)
 A-10866 (2300, 2700, 3100, 3500)
 A-10868 (2500, 2900, 3300, 3700)
 A-10869 (2700, 3100, 3500, 3900)

PUT HOLE SPECIAL ADJUSTMENT
 IN LIBERAL POSITION.

5 BALL PLAY

A-11194 (3200, 3600, 4000, 4400)
 A-11195 (3400, 3800, 4200, 4600)
 A-11196 (3600, 4000, 4400, 4800)
 *A-10870 (3800, 4200, 4600, 5000)
 A-10765 (4000, 4400, 4800, 5200)
 A-10767 (4200, 4600, 5000, 5400)
 A-10769 (4400, 4800, 5200, 5600)

PUT HOLE SPECIAL ADJUSTMENT
 IN CONSERVATIVE POSITION.

ADJUSTMENT PLUG LOCATIONS:

INSIDE LIGHTBOX = HIGH SCORE ADJ., HOLE SPECIAL ADJ.

BOTTOM PANEL = MATCH ADJ., TRIPLE CHUTE ADJ., 3rd CHUTE ADJ.

BOTTOM OF PLAYBOARD = 3-5 BALL ADJ.

TOP OF PLAYBOARD = POST ADJ.

A-10408