



PLAYBOARD INFORMATION

RUBBER RINGS

A - A-10217	(14)
B - A-10219	(2)
C - A-10220	(4)
D - A-10221	(2)
E - A-10224	(2)
F - A-13151	(2)
G - A-14793	(4)

PARTS LIST

1. A-3290 Ball Gate.
 2. C-15297 Plastic Shield Set.
 3. A-9143 Rebound Rubber.
 4. Blue Pop Bumper A-10436 and A-13859 Cap in Red.
 5. Yellow Pop Bumper A-10436 and A-13859 Cap in Red.
 6. A-9393 Plastic Ball Guide Rail.
 7. A-9395 Plastic Ball Guide Rail.
 8. A-9396 Plastic Ball Guide Rail.
 9. A-12431 Ball Guide Flat Rail.
 10. A-14787 Target White Star.
(Target & Sw. Assem. B-9591)
 11. A-9383 Bullseye Target.
 12. A-12796 Spinning Target.
 13. A-4832 Ball Guide Rail. (Wire Form)
 14. A-12106 Ball Guide Rail. (Wire Form)
 15. A-12107 Ball Guide Rail. (Wire Form)
 16. A-13798 Ball Snubber Guide Rail. (Wire Form)
 17. C-13977 Wood Rail. (Right Side)
 18. B-14391 Wood Rail. (Center Top)
 19. A-14392 Wood Rail. (Center Bottom)
 20. C-15360 Wood Rail. (Left Side)
 21. C-13150 Flippers.
 22. A-14792 Mini Post (Metal)
 23. A-13652 Ball Return Gate.
 24. A-15827 Ball Kicker Cam.
 25. D-11966 Red Insert and D-11968 White Button
 26. A-15838 Contact Kicker.
 27. A-10542 Steel Pin. (6)
 28. C-9767 Ball Shooter Gage.
 29. D-13647 Card Holder.
- C-11561 White Plastic Post 1" High. (38)
 A-14487 Split Post Cap White. (3)
 A-14488 Split Post Base White. (3)