


HI-SCORE REPLAY ADJUSTMENTS

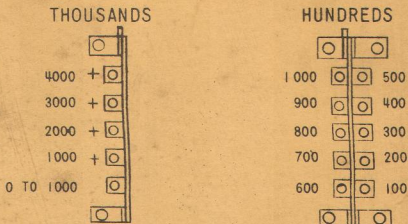

TO SCORE REPLAYS AT 100 TO 1000 :

PUT JACKS FED BY RED- WHITE WIRE INTO 0 TO 1000 ON THOUSANDS ADJUSTMENT PLUG AND 100, 200, 300 ETC; ON HUNDREDS ADJUSTMENT PLUG.

TO SCORE REPLAYS AT 1100 TO 2000:

PUT JACKS FED BY WHITE WIRE INTO 1000+ ON THOUSANDS ADJUSTMENT PLUG AND 100, 200, 300 ETC; ON HUNDREDS ADJUSTMENT PLUG.

TO SCORE REPLAYS AT 2100 TO 3000:

PUT JACKS FED BY WHITE WIRE INTO 2000 + ON THOUSANDS ADJUSTMENT PLUG AND 100, 200, 300 ETC; ON HUNDREDS ADJUSTMENT PLUG.

TO SCORE REPLAYS AT 3100 TO 4000:

PUT JACKS FED BY WHITE WIRE INTO 3000+ ON THOUSANDS ADJUSTMENT PLUG AND 100, 200, 300 ETC; ON HUNDREDS ADJUSTMENT PLUG.

TO SCORE REPLAYS AT 4100 TO 5000:

PUT JACKS FED BY WHITE WIRE INTO 4000+ ON THOUSANDS ADJUSTMENT PLUG AND 100, 200, 300 ETC; ON HUNDREDS ADJUSTMENT PLUG.

NOTE:

WHENEVER SCORES DESIGNATED TO SCORE REPLAYS OVERLAP, JACKS FED BY BOTH RED-WHITE AND WHITE WIRES MUST BE USED. EXAMPLE; TO SCORE REPLAYS AT 1700 - 1900 - 2000 AND 2100. JACKS FED BY RED-WHITE WIRE MUST BE PUT INTO 1000+ ON THOUSANDS ADJUSTMENT PLUG AND 700 - 900 - 1000 ON HUNDREDS ADJUSTMENT PLUG. JACKS FED BY WHITE WIRE MUST BE PUT INTO 2000+ ON THOUSANDS ADJUSTMENT PLUG AND 100 ON HUNDREDS ADJUSTMENT PLUG.