

**This document is made in 2017 using the original single page document "16A-333 EB , C-6947".**



**Here shown are the connections "Relay to plug".**

**"SHANGRI-LA"**


**"EXTRA BALL" RELAY ASSEMBLY INSTALLATION**

(AVAILABLE ON REQUEST)

1. SET NUMBER MATCH "ON-OFF" SWITCH (LOCATED IN BACK BOX) TO THE "OFF" POSITION.
2. REMOVE THE NUMBERED REEL FROM THE REPLAY UNIT AND APPLY THE REPLAY WINDOW MASK.
3. MOUNT THE EXTRA BALL RELAY TO THE RIGHT OF "TOTAL PLAY" METER AND TO THE LEFT OF 8 WAY REMOVABLE PLUG. REMOVE SHORTING PLUG FROM 8 WAY SOCKET AND INSERT PLUG FROM EXTRA BALL RELAY ASSEMBLY. RETAIN SHORTING PLUG AND NUMBERED REEL FOR FUTURE USE IF GAME IS CONVERTED TO REPLAY FEATURE.
4. REMOVE SCORE CARDS FROM BOTTOM ARCH AND REPLACE WITH APPROPRIATE "EX", EXTRA BALL, CARDS.
5. THE GAME IS NOW READY FOR CHECKOUT. AN EXTRA BALL WILL BE GIVEN IN PLACE OF REPLAYS. A MAXIMUM OF ONE EXTRA BALL FOR EACH BALL BEING PLAYED. WHEN EXTRA BALL IS MADE, A LITE AT THE BOTTOM OF GAME INDICATES "SAME PLAYER SHOOTS AGAIN". A LITE IN THE BACK BOX ALSO LITES, LITING UP "SAME PLAYER SHOOTS AGAIN".
6. GAMES EQUIPPED WITH DOUBLE COIN CHUTE AND 25¢ RELAY WILL NOT BE AFFECTED BY THE CONVERSION. CREDITS FOR THE 25¢ COIN WILL BE ADDED IN THE CONVENTIONAL MANNER.
7. WHEN ORDERING "EXTRA BALL" RELAY KIT, ORDER BY PART NO. C 6947.

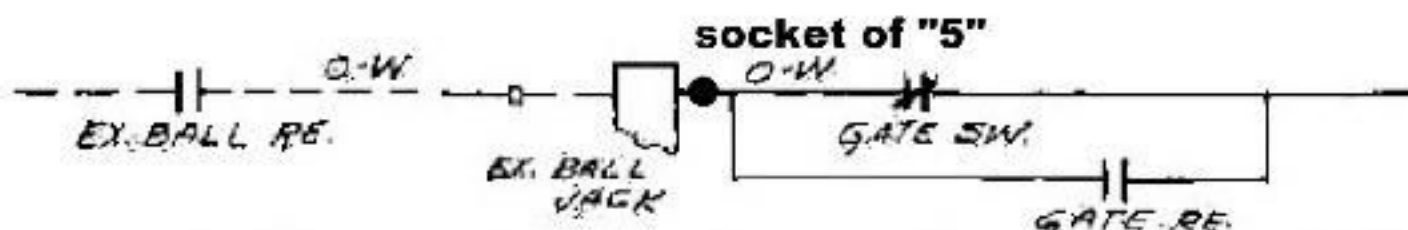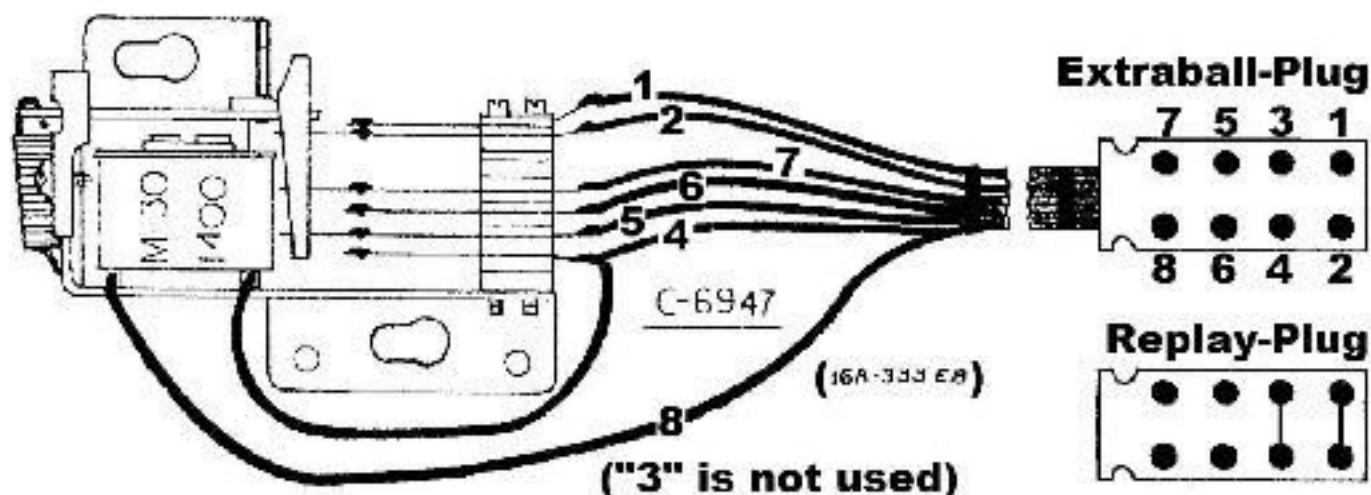

TOP OF JONES PLUG

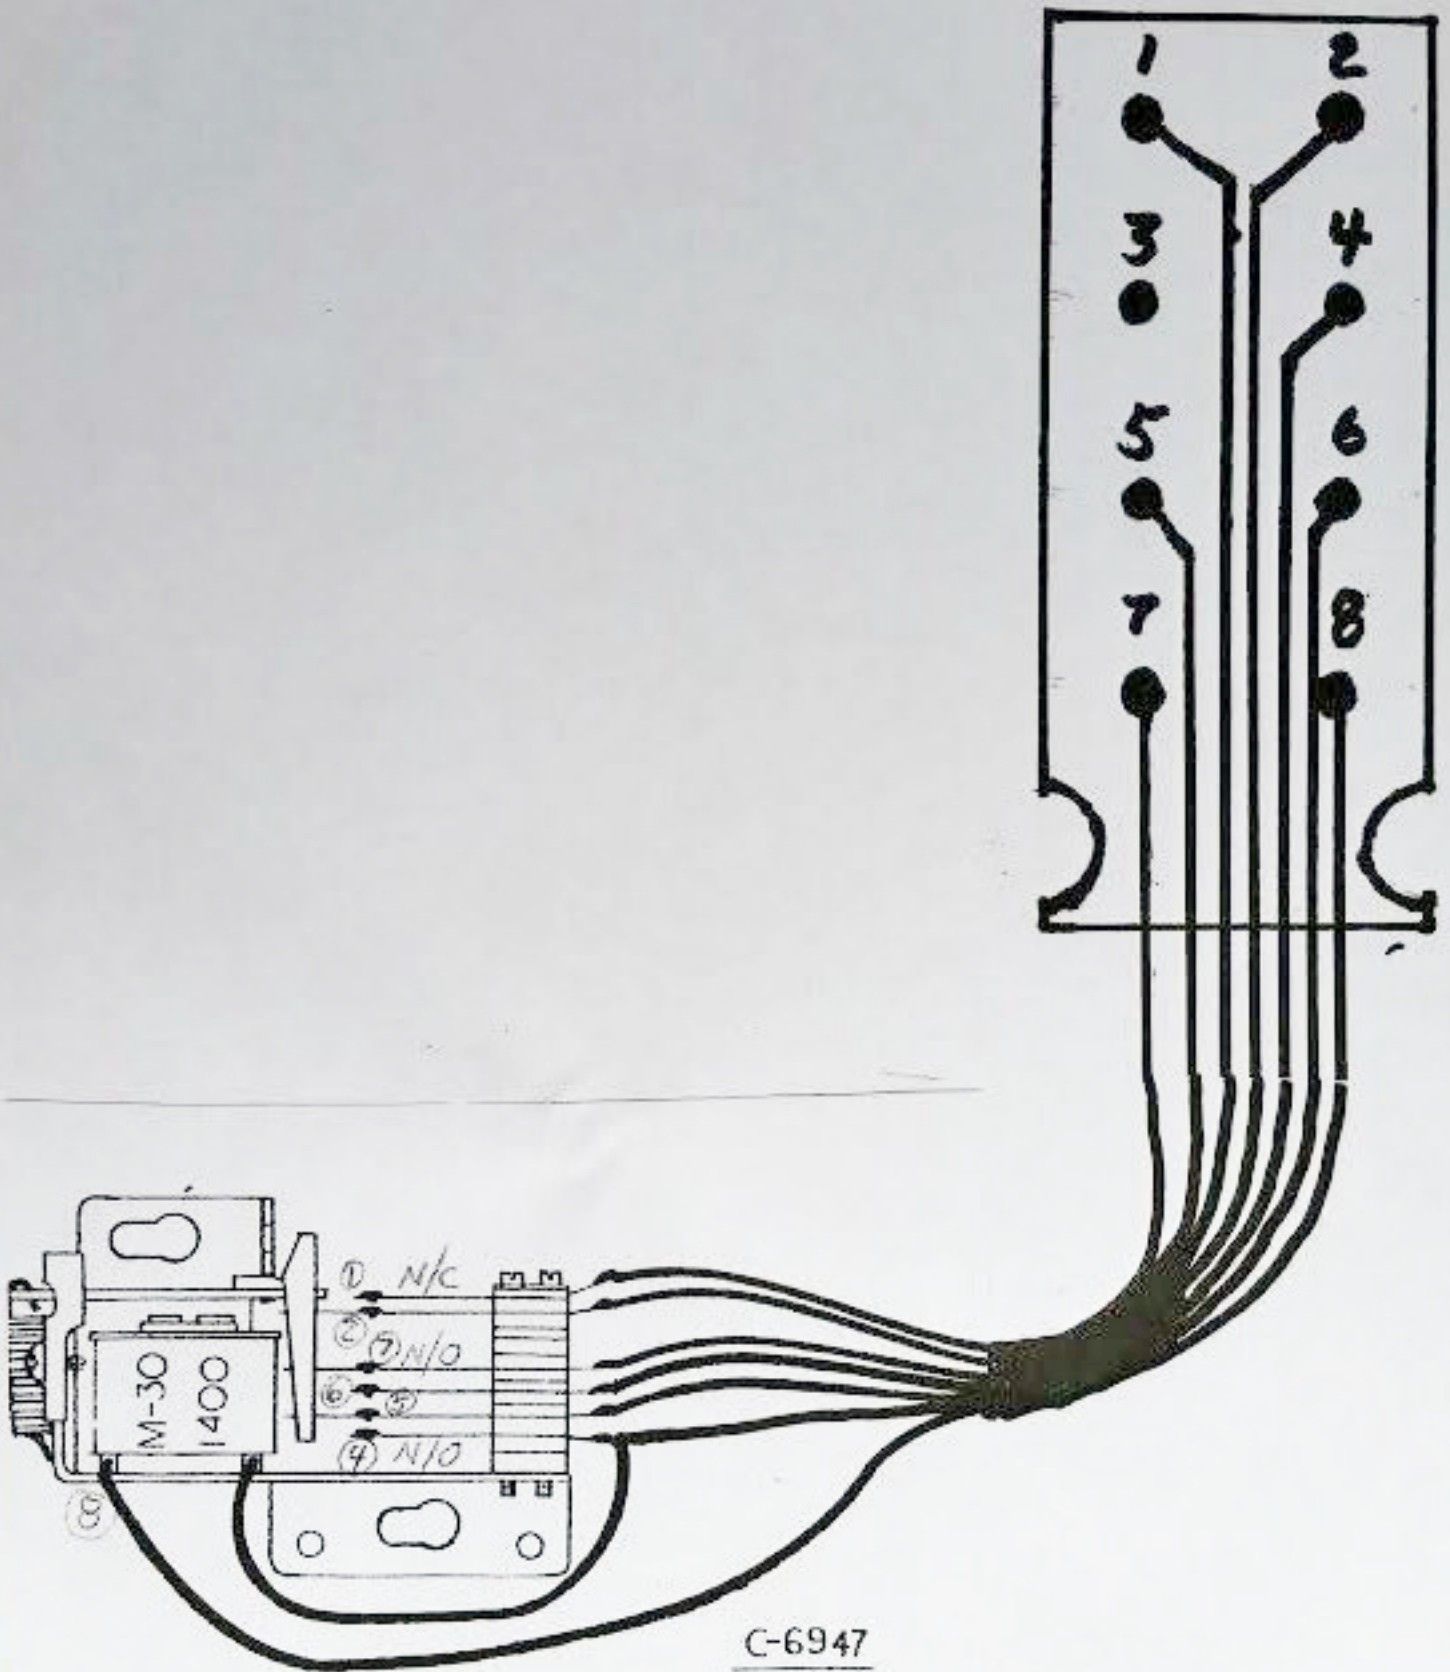

C-6947