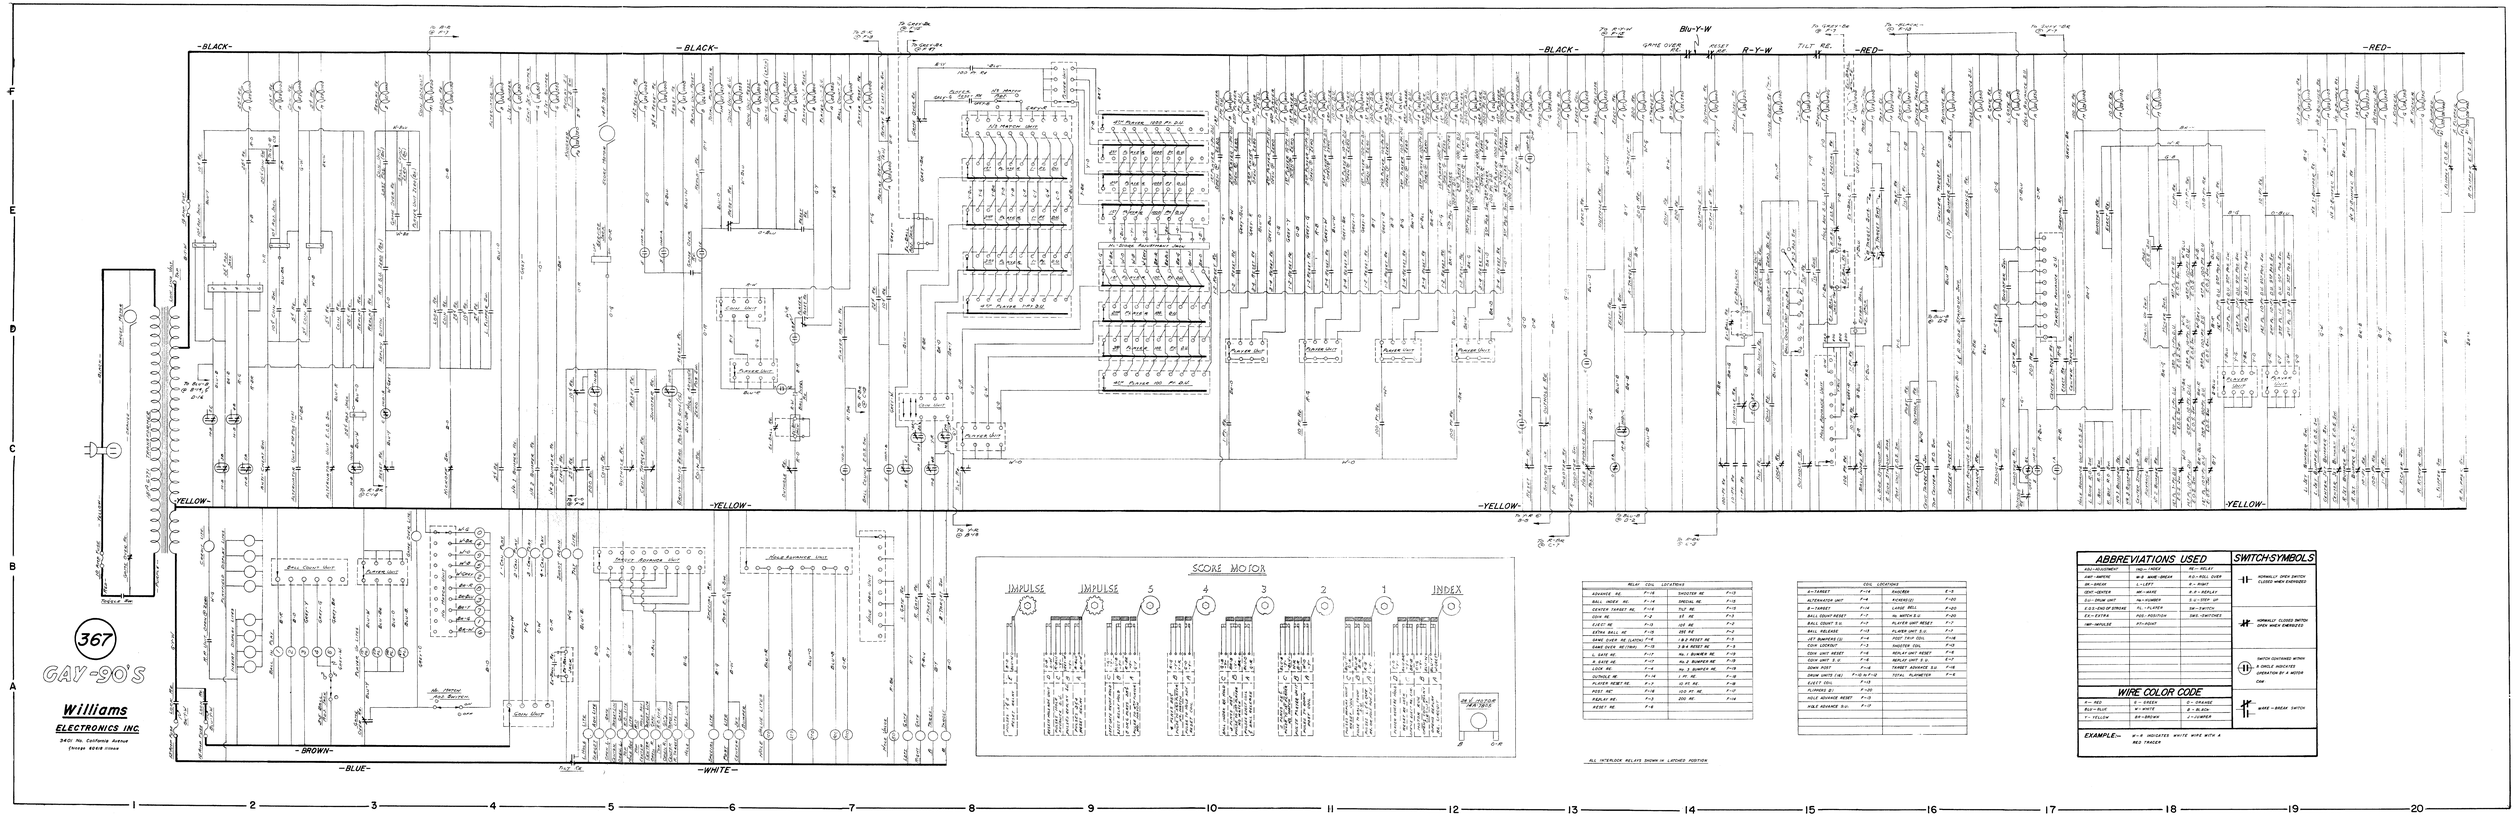

RELAY COIL LOCATIONS			
ADVANCE RE.	F-14	SHOOTER RE.	F-13
BALL INDEX RE.	F-14	SPECIAL RE.	F-13
CENTER TARGET RE.	F-14	TILT RE.	F-13
COIN RE.	F-2	1ST RE.	F-3
EJECT RE.	F-13	1ST RE.	F-2
EXTRA BALL RE.	F-13	2ND RE.	F-2
GAME OVER RE. (LATCH)	F-6	1 & 2 RESET RE.	F-3
GAME OVER RE. (TIME)	F-13	3 & 4 RESET RE.	F-3
L. GATE RE.	F-17	No. 1 BUMPER RE.	F-13
R. GATE RE.	F-17	No. 2 BUMPER RE.	F-13
LOCK RE.	F-4	No. 3 BUMPER RE.	F-13
OUTHOLE RE.	F-14	1 PT. RE.	F-13
PLAYER RESET RE.	F-3	10 PT. RE.	F-13
POST RE.	F-14	100 PT. RE.	F-13
REPLAY RE.	F-13	200 RE.	F-14
RESET RE.	F-6		

ALL INTERLOCK RELAYS SHOWN IN LATCHED POSITION

COIL LOCATIONS			
A-TARGET	F-14	BANDERS	E-5
ALTERNATOR UNIT	F-4	ACTUATOR	F-20
B-TARGET	F-14	LARGE BELL	F-20
BALL COUNT RESET	F-7	No. MOTOR S.U.	F-20
BALL COUNT S.U.	F-7	PLAYER UNIT RESET	F-7
BALL RELEASE	F-13	PLAYER UNIT S.U.	F-7
JET BUMPERS (3)	F-4	POST TRIP COIL	F-13
COIN LOCKOUT	F-3	SHOOTER COIL	F-13
COIN UNIT RESET	F-4	REPLAY UNIT RESET	F-6
COIN UNIT S.U.	F-4	REPLAY UNIT S.U.	F-7
DOWN POST	F-4	TARGET ADVANCE S.U.	F-14
DROW UNITS (16)	F-10 & F-12	TOTAL PLAYMETER	F-6
EJECT COIL	F-13		
FLIPPERS (2)	F-20		
HOLE ADVANCE RESET	F-13		
HOLE ADVANCE S.U.	F-13		

ABBREVIATIONS USED		
ABS-ABSORBENT	INDU-INDEX	RE-RELAY
AMP-AMPERE	W-B WIRE-BREAK	R.O.-ROLL OVER
BR-BREAK	L-LEFT	R-RIGHT
CENT-CENTER	MR-MARK	R.R.-REPLAY
D.U.-DRUM UNIT	NO.-NUMBER	S.U.-STEP UP
E.O.D.-END OF STROKE	PL-PLAYER	SW-SWITCH
EX-EXTRA	POS-POSITION	SWS-SWITCHES
IMP-IMPULSE	PT-POINT	

WIRE COLOR CODE		
A-RED	G-GREEN	O-ORANGE
BLU-BLUE	W-WHITE	B-BLACK
Y-YELLOW	BR-BROWN	J-JUMPER

EXAMPLE:- W-B INDICATES WHITE WIRE WITH A RED TRACER

SWITCH SYMBOLS	
	NORMALLY OPEN SWITCH CLOSED WHEN ENERGIZED
	NORMALLY CLOSED SWITCH OPEN WHEN ENERGIZED
	SWITCH CONTAINED WITHIN A CIRCLE INDICATES OPERATION BY A MOTOR CAM
	WIRE-BREAK SWITCH