

Instruction Manual for

DEALERS CHOICE



Williams® ELECTRONICS

A DIVISION OF
THE SEEBURG CORPORATION OF DELAWARE

3401 N. California Ave.
(312) 267-2240

MARCH
1974

Chicago, Ill. 60618, U.S.A.
Cable Address: Wilcoin

DEALERS CHOICE

4 PLAYER

GAME OPERATES AS FOLLOWS:

MAKING TEN, JACK, QUEEN, KING AND ACE WILL LITE RIGHT BOTTOM ROLLOVER TO SCORE SPECIAL.

MAKING TEN, JACK, QUEEN, KING AND ACE AGAIN WILL LITE SIDE ROLLOVER TO SCORE SPECIAL.

ONE REPLAY FOR BALL THRU ROLLOVER WHEN SPECIAL LITE IS LIT.

MAKING 1T09 DOUBLES BONUS VALUE.

MAKING 1T09 AGAIN TRIPLES BONUS VALUE AND LITES 1T09 SPECIAL LITE.

ONE REPLAY EACH TIME 1T09 IS MADE WHEN SPECIAL LITE IS LIT.


ONE REPLAY FOR EACH PLAYER MATCHING LAST TWO NUMBERS ON SCORE REELS TO LIT NUMBER THAT APPEARS ON BACK-GLASS WHEN GAME IS OVER.

TILT PENALTY- BALL IN PLAY.

TILT DOES NOT DISQUALIFY PLAYER.

SEE "REPLAY-EXTRA BALL" ADJUSTMENT JACK AND "HI-SCORE" ADJUSTMENT JACK ON PAGE 5.

SILICON BRIDGE RECTIFIER

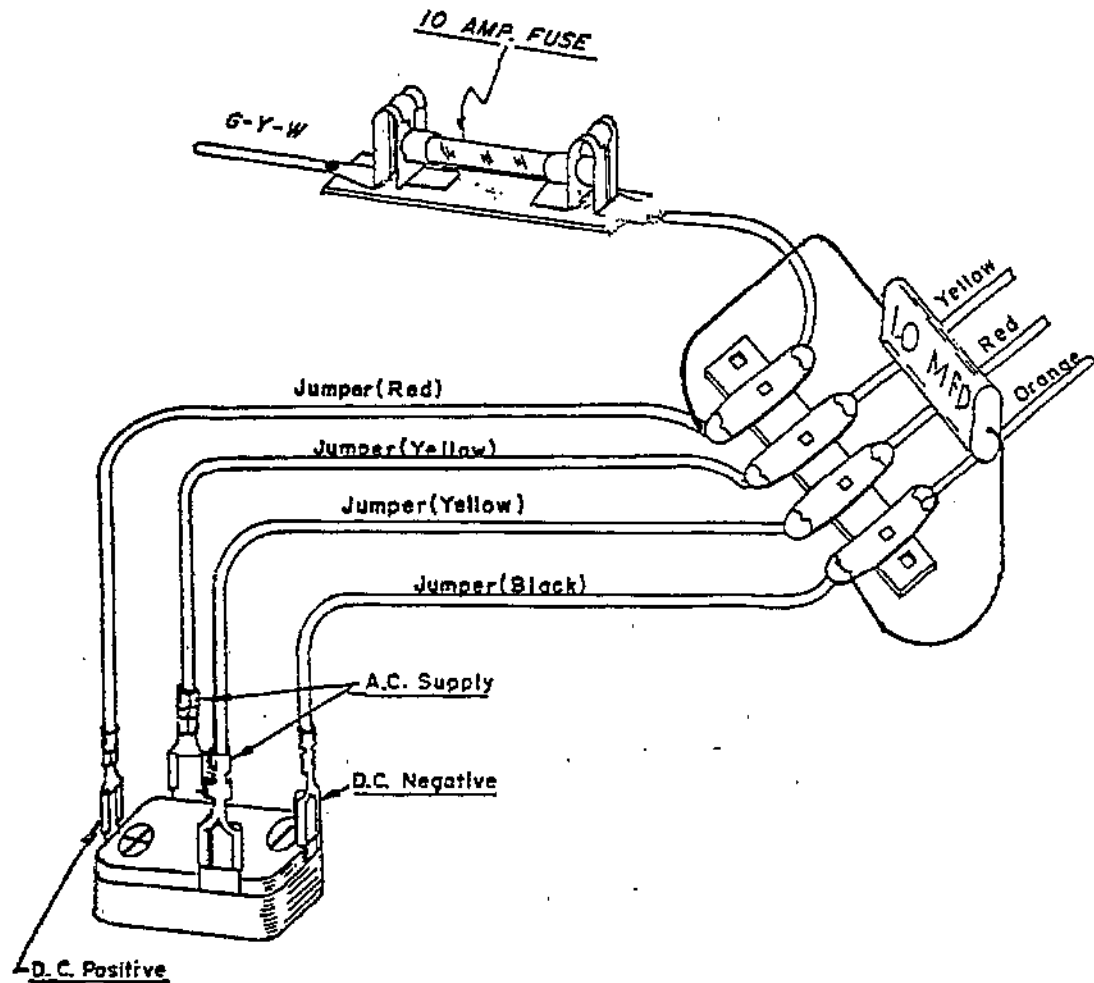

THE FUNCTION OF THE RECTIFIER AND CAPACITOR IS TO CONVERT THE ALTERNATING CURRENT (A.C.) TO DIRECT CURRENT (D.C.), SUPPLYING D.C. TO THE BUMPERS, KICKERS ETC.


THE BRIDGE RECTIFIER SHOULD PRACTICALLY NEVER NEED REPLACING, AS IT IS RATED WELL OVER THE VOLTAGE AND CURRENT REQUIREMENTS OF THE COMPONENTS IT SUPPLIES.

IF, HOWEVER, THE 15 AMP 24 VOLT FUSE ON THE MECHANISM PANEL OPENS, IT COULD BE DUE TO A FAULTY RECTIFIER. DISCONNECT THE A.C. INPUT TO RECTIFIER, REPLACE FUSE, AND RECHECK.

IF THE 10 AMP FUSE LOCATED NEXT TO THE RECTIFIER OPENS, CHECK ALL D.C. COMPONENTS I.E. BUMPERS, KICKERS ETC. FOR SHORTS.

" DEALERS CHOICE " - POST ADJUSTMENT SHEET

TO MAKE GAME MORE "CONSERVATIVE" OR "LIBERAL" - MOVE POST $\frac{3}{16}$ " AS SHOWN IN SKETCH BELOW. SPOTTING HOLES ARE PROVIDED AND CAN BE SEEN ON REMOVAL OF POSTS.

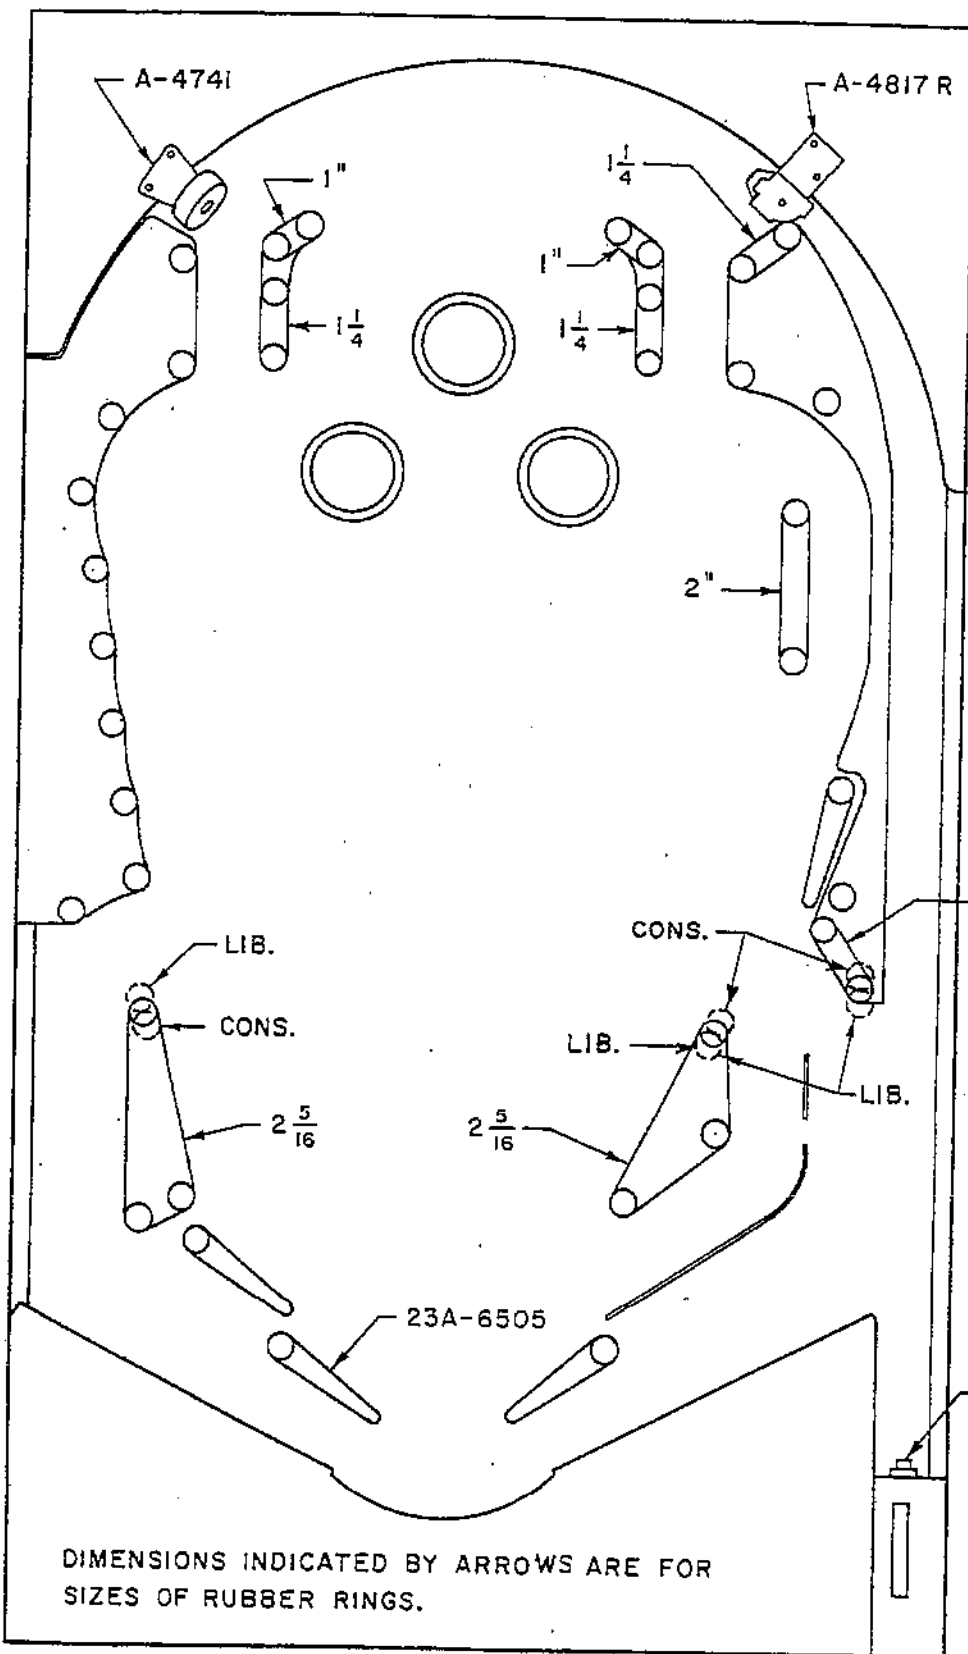

ABBREVIATIONS:
 CONS. - CONSERVATIVE
 LIB. - LIBERAL

RUBBER RING NUMBERS:

| | |
|----------|-------------------------|
| 23A-6300 | $\frac{5}{16}$ " I.D. |
| 23A-6302 | 1" I.D. |
| 23A-6303 | $1 \frac{1}{4}$ " I.D. |
| 23A-6304 | $1 \frac{1}{2}$ " I.D. |
| 23A-6305 | 2" I.D. |
| 23A-6306 | $2 \frac{5}{16}$ " I.D. |
| 23A-6505 | $1 \frac{1}{2}$ " I.D. |


A-4741 REBOUND ASS'Y.
 A-4817R BALL GATE ASS'Y.

23A-6327 BALL SHOOTER
 RUBBER TIP


DIMENSIONS INDICATED BY ARROWS ARE FOR SIZES OF RUBBER RINGS.

ADJUSTMENTS ON MECHANISM PANEL


10¢ Adjustment

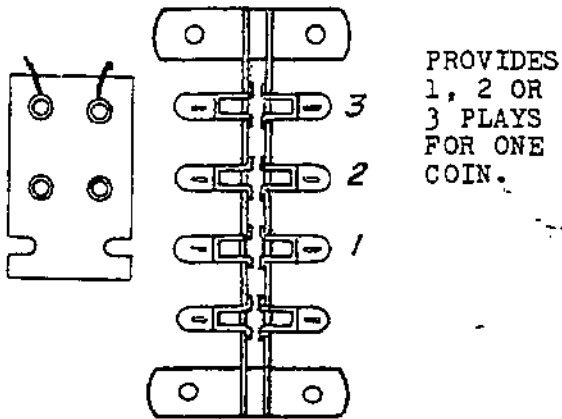


5¢ Adjustment

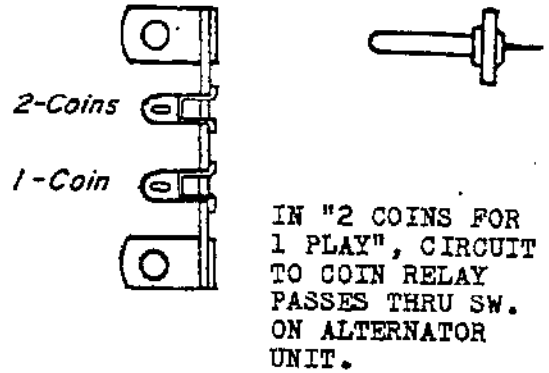

25¢ Adjustment

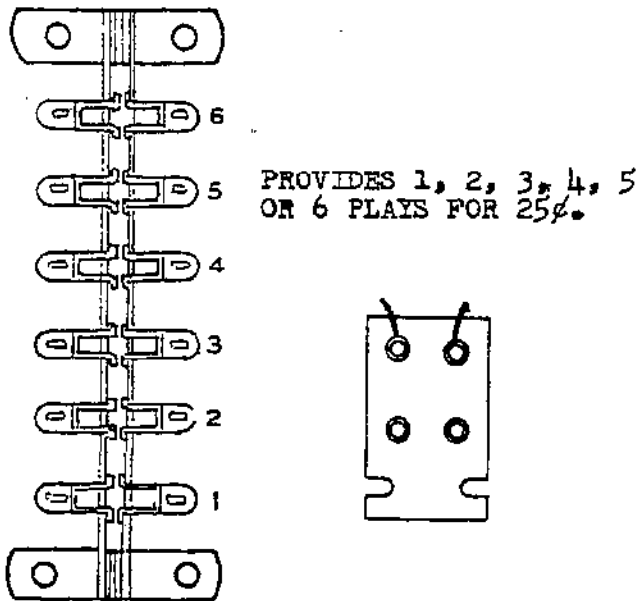


Motor Service Jack

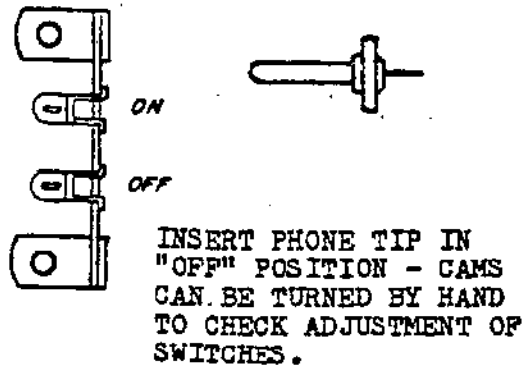

ADJUSTMENTS IN BACKBOX


Hi-Score Adjustment

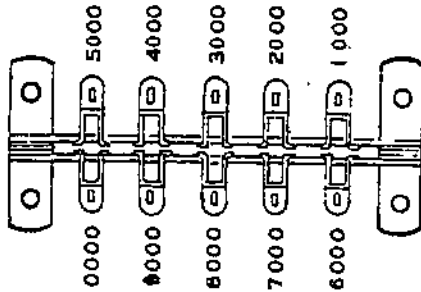

Insert plugs into 10 Point Female at desired positions.


Examples:

Yellow wire into 3000 position scores at 33000.
 Yellow wire into 0000 position scores at 40000.

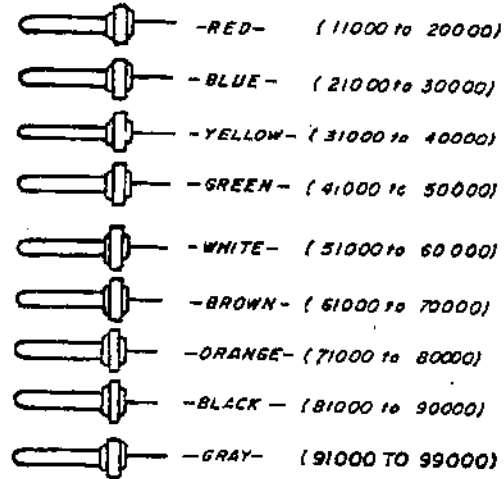


No. of Balls Adjustment

3 BALL 5 BALL

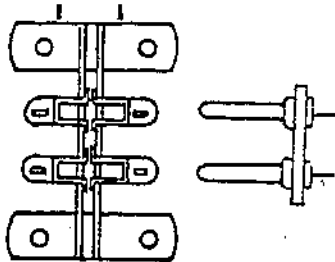


THIS JACK CHANGES 3 BALL TO 5 BALL PLAY OR VICE VERSA.

NUMBER MATCH ADJUSTMENT

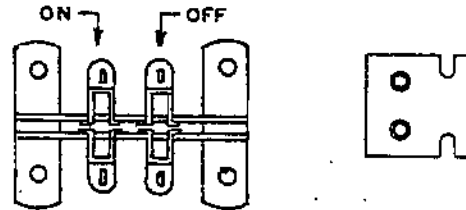

In 'ON' position, a number match lite will appear when game is over. To award replays, when number is matched, Extra Ball Adjustment Jack must be in 'Replay' position. In 'Off' position, Number Match is inoperative.

REPLAY-EXTRA BALL ADJ.

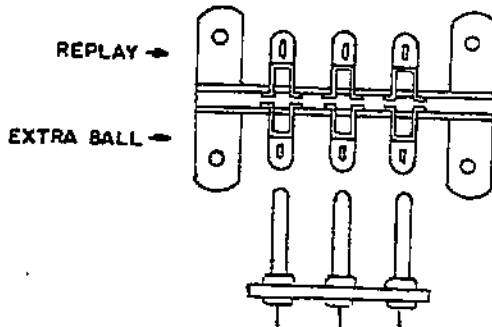


IN REPLAY POSITION: HI-SCORES AND NUMBER MATCH WILL AWARD REPLAYS---MAKING RIGHT SIDE ROLLOVER SWITCH, WHEN SPECIAL RELAY IS ENERGIZED, WILL AWARD A REPLAY---AND "1 TO 9 RESET RELAY". WHEN TRIPLE BONUS RELAY IS ENERGIZED, WILL AWARD A REPLAY.

IN EXTRA BALL POSITION: HI-SCORES WILL AWARD EXTRA BALL. RIGHT SIDE ROLLOVER (AS EXPLAINED ABOVE) AND "1 TO 9 RESET RELAY" (AS EXPLAINED ABOVE) WILL ENERGIZE 5000 RELAY.

MASTER ON-OFF SW.

(Located under front of Cabinet)

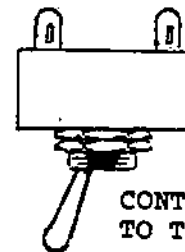

CONTROLS POWER TO TRANSFORMER

1. GENERAL

NEVER EXPERIMENT with any of the mechanism. Locate any trouble with the aid of Wiring Diagrams or Operating & Servicing Information supplied with the machine, then check for proper adjustment of the units involved before making any changes. Improper adjustment or make-shift repair will only cause serious damage to other parts of the machine or repeated failure of the part.

NOTE: Always look for a possible loose wire, bad connection at a plug and socket, broken or unhooked springs on step-up units, relays, etc., before adjustments are made or wires reconnected.

2. FUSES

IMPORTANT: Never replace fuses with any rating other than specified on the fuse block; this block is located adjacent to the transformer.

3. LUBRICATION

Over-lubrication causes far more trouble in coin operated equipment than under-lubrication. Practically all cases of poor contact on switches and wiper discs are due to oil or grease, or oil vapor, which forms a film or residue on the contacts and will not allow current to pass through. Excess lubricant may also seen into clutches causing them to slip.

IMPORTANT: NEVER USE VASELINE FOR LUBRICATION OF ANY PART OF THE MACHINE. Vaseline is not a true lubricant. It leaves a dirty and gummy residue and it becomes very thick when cold. A special Coin Machine Lubricant is supplied with each machine.

STEP-UP Levers, Ratchets, Cams, Shafts and other sliding or oscillating parts should be very lightly greased with special Coin Machine Lubricant (supplied with machine) not oftener than every six months. The bakelite discs (biscuits) on the Motor Units and Step-up Units will require lubrication with the special Coin Machine Lubricant only after the grease is completely evaporated (3 to 12 months, depending on climate) or when the film of grease becomes dirty. In either event, clean the parts thoroughly with a solvent, then apply an extremely thin coat of the special grease.

Solenoid Plungers should not have a lubricant of any kind. Should there be a sluggish tendency or if plungers are sticking, the parts should be cleaned with a solvent and flaked graphite applied on reassembly.

SWITCH ADJUSTMENT

BEFORE ADJUSTING SWITCHES, MAKE CERTAIN THE SCREWS HOLDING THE SWITCH STACKS ARE DOWN TIGHTLY. BAKELITE SPACERS IN THE SWITCH STACKS, DUE TO EXCESSIVE MOISTURE, HAVE OCCASIONALLY SHRUNK BY DRYING OUT, CAUSING POOR ADJUSTMENT.

IMPORTANT NOTICE

KINDLY INFORM LOCATIONS THAT THEY CAN TURN DISPLAY LIGHTS ON BY PRESSING LEFT FLIPPER BUTTON. MACHINE CAN STILL BE SHUT OFF BY TAPPING BOTTOM OF CABINET.

MASTER SWITCH (ON-OFF) IS LOCATED UNDERNEATH FRONT PART OF CABINET.

CAUTION!

The playboard on this machine has an improved finish with excellent wearing properties. Do not under any circumstances clean the board with water, water soap solutions or harsh abrasives. Avoid such things as steel wool, kitchen cleansers or abrasive hand soap. Water will weaken the adhering of the paint to the board and abrasives shorten the board life by many thousand plays. A wax base cleaner with negligible abrasive qualities used lightly, but frequently, will extend the board life to its full capabilities.


SERVICEMAN TO REMOVE BACKGLASS:

- WITH BACK DOOR REMOVED, PULL BACK ON BRACKETS AT INSIDE TOP OF LITE BOX.
- FROM THE FRONT OF GAME, LIFT GLASS UP AND OUT.

ALTERNATOR UNIT

LOCATED ON MECHANISM PANEL.

USED IN CONJUNCTION WITH 5¢ RELAY FOR "2COINS-1PLAY" FEATURE.

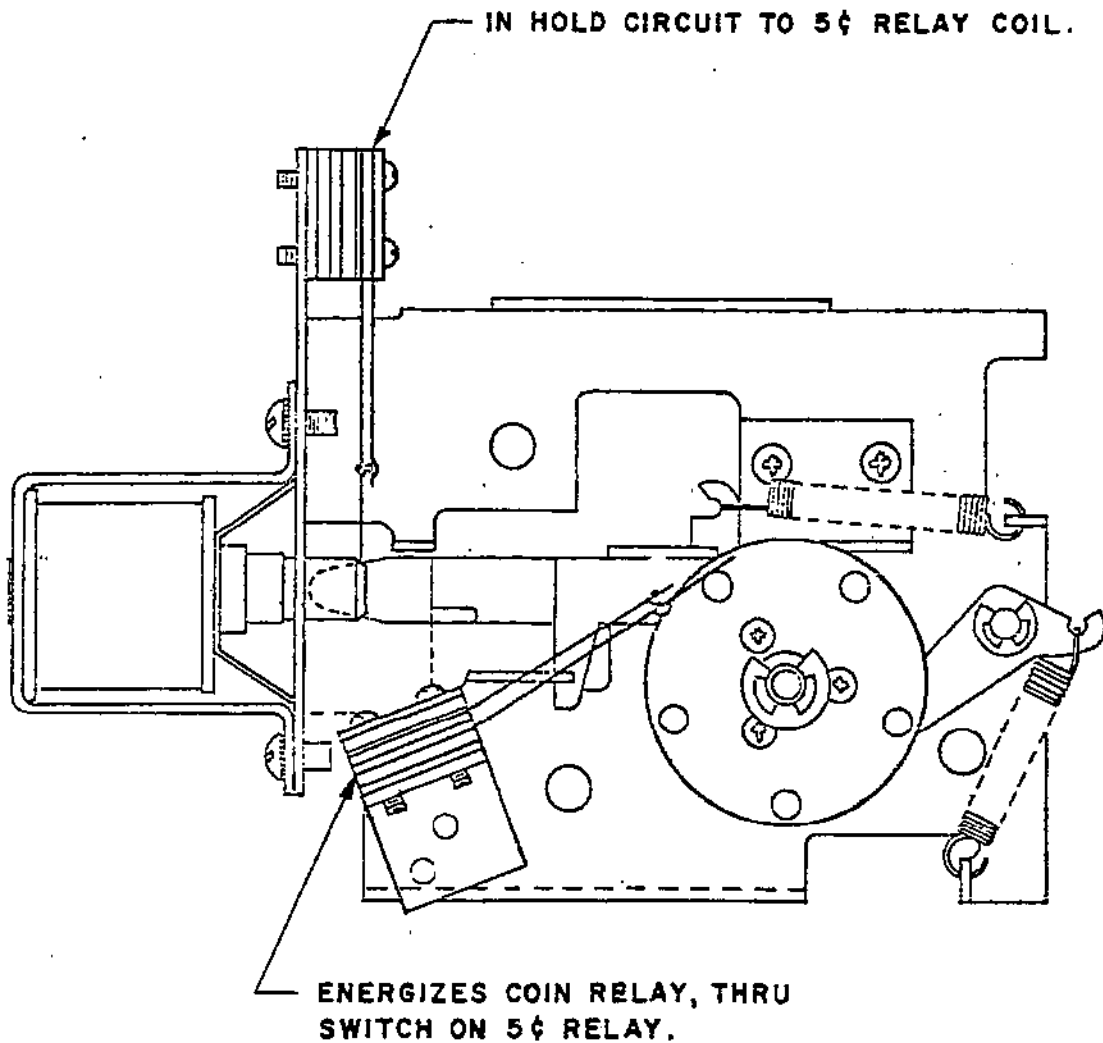

WARRANTY

THE MOTORS IN ALL NEW WILLIAMS PRODUCTS
ARE UN-CONDITIONALLY GUARANTEED FOR
6 MONTHS FROM DATE OF PURCHASE.

ANY DEFECTIVE MOTORS RETURNED DURING THE
WARRANTY PERIOD WILL BE REPLACED FREE OF
CHARGE BY YOUR WILLIAMS DISTRIBUTOR.

IMPORTANT NOTICE

WHEN ORDERING PARTS ALWAYS SPECIFY NAME OF
UNIT, GAME AND SERIAL NUMBER, IN ADDITION TO A
CLEAR DESCRIPTION OF THE PART AND PART
NUMBER IF POSSIBLE.

UNIT PARTS LIST

| UNIT NAME | CONTACT DISC | WIPER ASSEMBLY | RATCHET GEAR ASSEMBLY | MOTORS |
|-------------|--------------|----------------|-----------------------|---------------------|
| REPLAY | ----- | ----- | A-6400-1 | |
| BALL COUNT | C-6414 | B-7456-6 | A-6402-5 | |
| NO. MATCH | C-6414 | B-7456-2 | A-6401 | |
| PLAYER | C-6417 | C-6521 | A-6404-3 | |
| COIN | C-6414 | B-7456-9 | A-6402-3 | |
| BONUS | C-6417 | B-7456-33 | A-6402-10 | SCORE MOTOR |
| 10 POINT | B-7253 | A-6294 | 3C-7272 | 14A-7883 (60 CYCLE) |
| 100 POINT | ----- | ----- | 3C-7272 | 14A-7884 (50 CYCLE) |
| 1000 POINT | B-7253 | A-6294 | 3C-7272 | |
| 10000 POINT | B-7253 | A-6294 | 3C-7272 | |
| ALTERNATOR | ----- | ----- | 3C-7272 | |

DEALERS CHOICE GOLD CHINA

NOTICE:


THIS GAME OPERATES ON 24 VOLTS. WHEN ORDERING REPLACEMENT TRANSFORMERS, MOTORS, COILS OR METERS...MAKE SURE TO SPECIFY CORRECT PART NUMBER.

| <u>NUMBER</u> | <u>DESCRIPTION</u> | <u>LOCATION</u> |
|-----------------------|---|--|
| 14A-7883 | CONTROL MOTOR - 60 CYCLE | MECH. PANEL |
| 14A-7884 | CONTROL MOTOR - 50 CYCLE | MECH. PANEL |
| 15A-6771 | TRANSFORMER - 60 CYCLE | MECH. PANEL |
| 15A-6782-1 | TRANSFORMER - 50 CYCLE | MECH. PANEL |
| B 6396 | 24 VOLT METER | MECH. PANEL |
| <u>SOLENOID COILS</u> | | |
| A 22-550 | COIN UNIT STEP UP BONUS UNIT STEP UP PLAYER UNIT STEP UP BALL RELEASE | MECH. PANEL PLAYFIELD INSERT PLAYFIELD |
| A 23-600 | BALL COUNT UNIT STEP UP REPLAY UNIT STEP UP NUMBER MATCH UNIT STEP UP | MECH. PANEL INSERT INSERT |
| A2 23-750 | KNOCKER | CABINET |
| A2 26-1300 | CHIME COILS...(3 req'd) | CABINET |
| B 26-800 | BALL COUNT UNIT RESET COIN UNIT RESET ALTERNATOR UNIT STEP UP PLAYER UNIT RESET | MECH. PANEL MECH. PANEL MECH. PANEL INSERT |
| B1-26-800 | REPLAY UNIT RESET SCORE DRUM UNITS...(16 req'd) BONUS UNIT RESET | INSERT INSERT PLAYFIELD |
| D1 24-1600 | BANK RESET COILS...(2 req'd) | PLAYFIELD |
| FL 21-375/28-400 | FLIPPERS...(4 req'd) | PLAYFIELD |
| G 23-750 D.C. | JET BUMPER COILS...(3 req'd) AUTOMATIC KICKERS...(2 req'd) | PLAYFIELD PLAYFIELD |
| M 29-900 | 1-2 RESET RELAY 3-4 RESET RELAY RESET RELAY | INSERT INSERT MECH. PANEL |
| M 29-1000 | GAME OVER RELAY TRIP | MECH. PANEL |
| M 29-1100 | 10 POINT RELAY 100 POINT RELAY 1,000 POINT RELAY ADVANCE RELAY 50 POINT RELAY 5,000 POINT RELAY BONUS RELAY 1 TO 9 RESET RELAY 10 TO ACE RESET RELAY 5¢ RELAY 10¢ RELAY 25¢ RELAY OUTHOLE RELAY | INSERT INSERT INSERT PLAYFIELD PLAYFIELD PLAYFIELD PLAYFIELD PLAYFIELD PLAYFIELD MECH. PANEL MECH. PANEL MECH. PANEL MECH. PANEL |
| M 1-31-1500 | COIN LOCKOUT COIL | FRONT DOOR |
| S 27-500 | BANK TRIP COILS...(14 req'd) | PLAYFIELD |
| XM 27-675 | TOTAL PLAY METER COIL | MECH. PANEL |
| Z 27-1000 | GAME OVER RELAY LATCH PLAYER RESET RELAY REPLAY RELAY COIN RELAY | MECH. PANEL MECH. PANEL MECH. PANEL MECH. PANEL |
| Z 28-1150 | DOUBLE BONUS RELAY TRIPLE BONUS RELAY SET UP RELAY TILT RELAY BALL INDEX RELAY EXTRA BALL RELAY | PLAYFIELD PLAYFIELD PLAYFIELD MECH. PANEL MECH. PANEL MECH. PANEL |
| Z 28-1200 | SPECIAL RELAY | PLAYFIELD |
| Z 29-1250 | LOCK RELAY | MECH. PANEL |

BALL COUNT UNIT DISC


THIS UNIT RESETS AT THE START OF A NEW GAME, (DURING RESET CYCLE). IT ADVANCES ONE STEP EACH TIME THE LAST PLAYER COMPLETES HIS TURN.

View looking at WIPER FINGER side with WIPER in ZERO position.

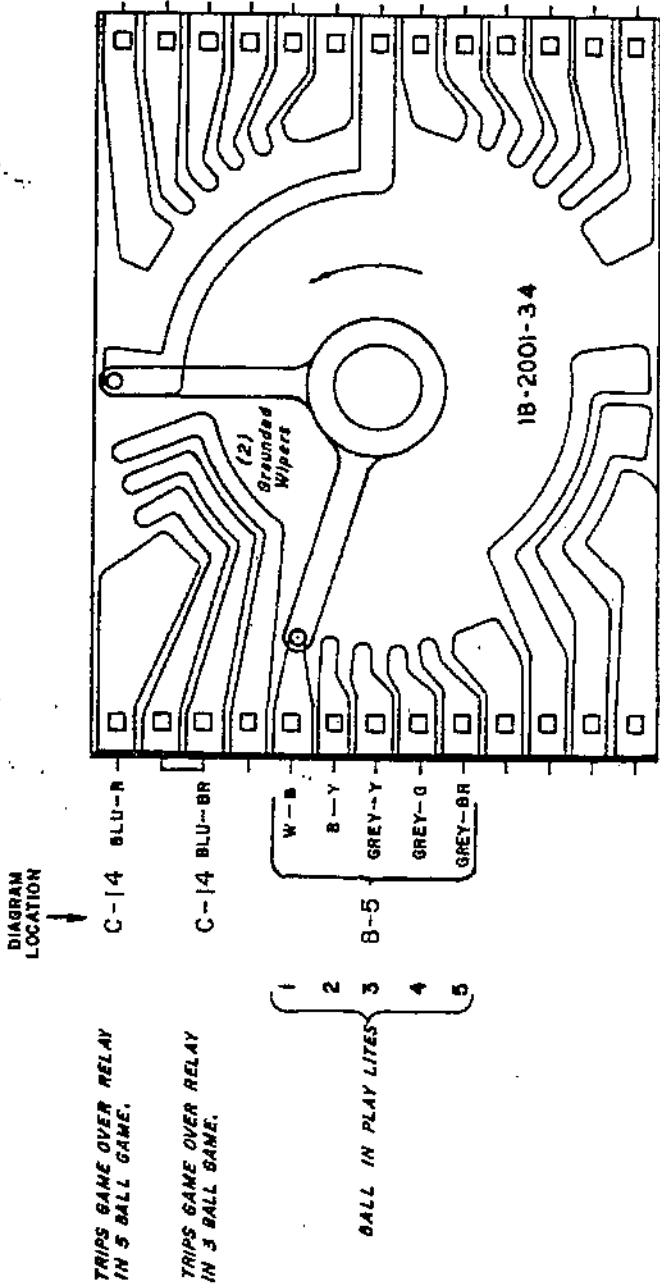

COIN S. U. DISC

THIS UNIT RESETS AT START OF A GAME (DURING RESET CYCLE). IT THEN ADVANCES ONE STEP EACH TIME THE COIN RELAY IS PULSED.

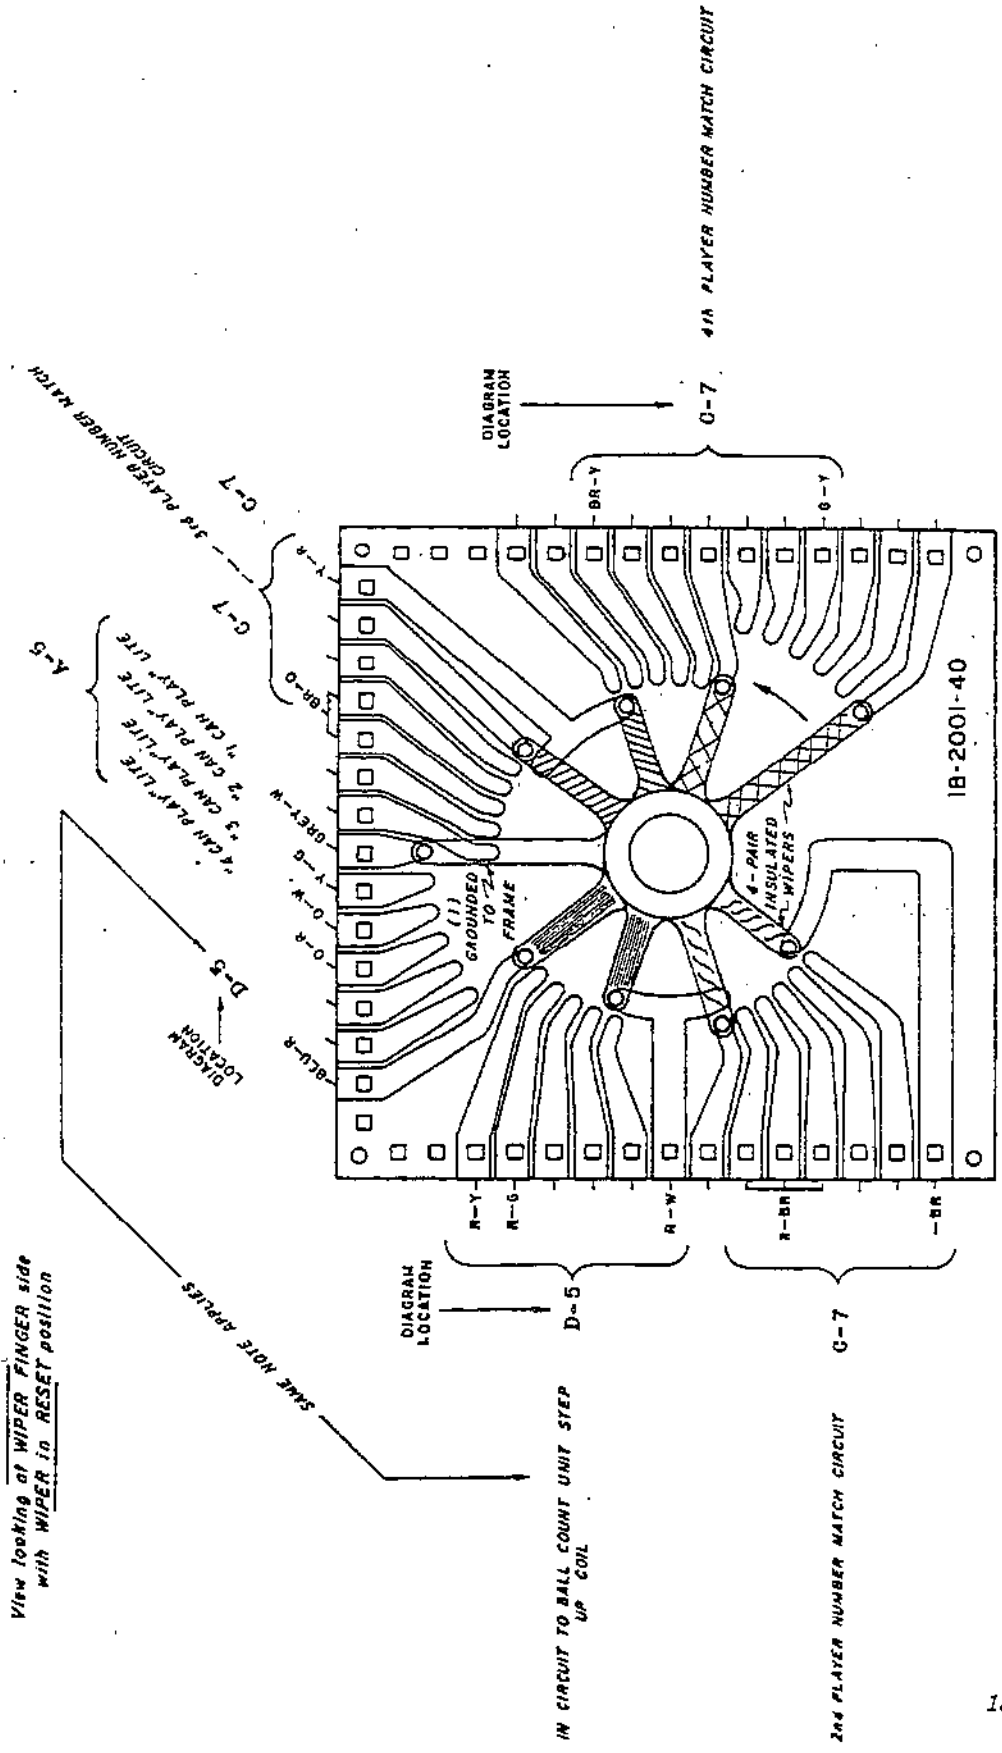

View looking at WIPER FINGER side with WIPER in RESET position



SAME NOTE APPLIES

IN CIRCUIT TO BALL COUNT UNIT STEP UP COIL


2ND PLAYER NUMBER MATCH CIRCUIT

4TH PLAYER NUMBER MATCH CIRCUIT

PLAYER UNIT DISC

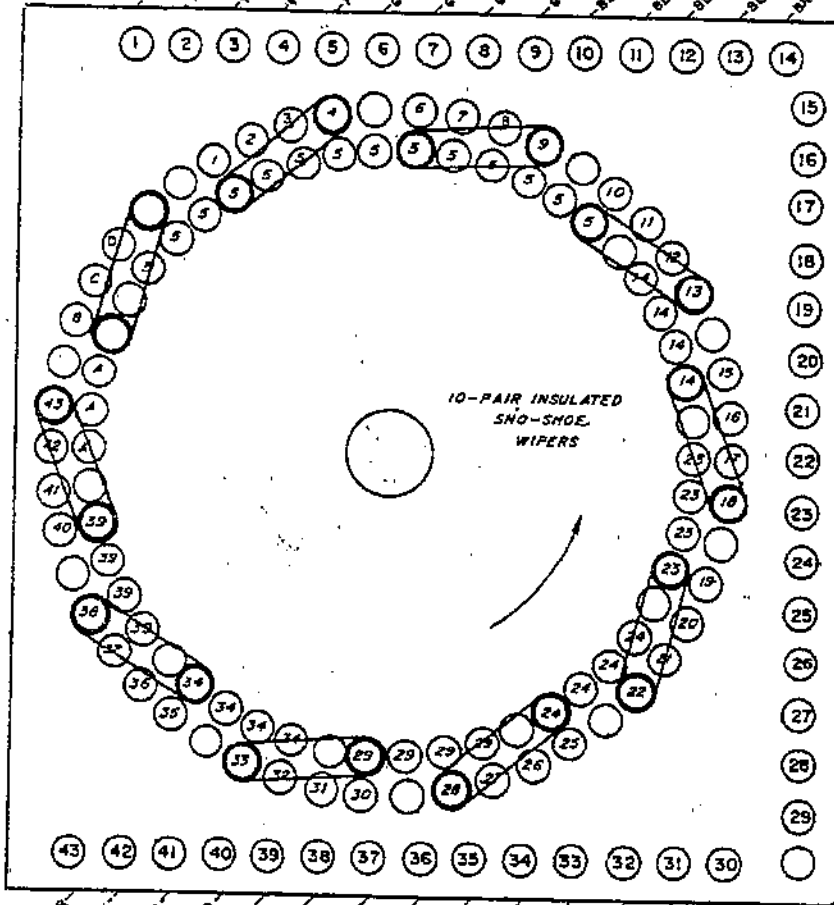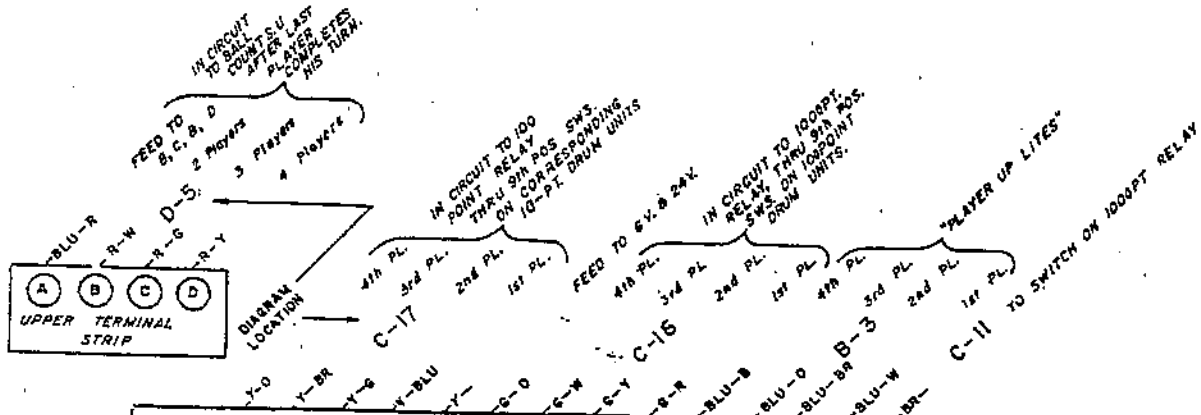

- DIAGRAM LOCATION
- 15 O-R 4th PL. IN CIRCUIT TO 1000POINT DRUM UNIT
 - 16 BR-B 3rd PL. COILS THRU 9th POSITION SWS. ON CORRESPONDING 1000POINT DRUM UNITS.
 - 17 BR-W 2nd PL. C-11
 - 18 BLU-Y 1st PL.
 - 19 W-C 4th PL.
 - 20 W-BLU 3rd PL. TO 1000POINT DRUM UNIT COILS
 - 21 B-G 2nd PL. C-10
 - 22 GREY-B 1st PL.
 - 23 W- C-10 TO SWITCH ON 1000 POINT RELAY
 - 24 R-G C-10 TO SWITCH ON 100 POINT RELAY
 - 25 GREY-O 4th PL.
 - 26 GREY-BR 3rd PL. TO 1000POINT DRUM UNIT COILS
 - 27 GREY-W 2nd PL. C-10
 - 28 GREY-O 1st PL.
 - 29 BR-O C-9 TO SWITCH ON 100 POINT RELAY

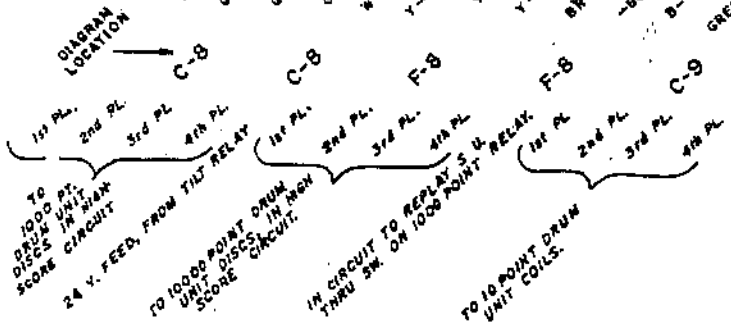


View looking at WIPER FINGER side with unit in RESET position (1st Player Up)

No. MATCH UNIT

THIS UNIT ADVANCES ONE STEP EACH TIME THE TEN POINT RELAY IS PULSED.

VIEW LOOKING AT WIPER FINGER SIDE

IN NO. MATCH CIRCUIT, THESE WIRES COME FROM THE 10 PT. D.U. DISC OF ALL 4 PLAYERS.

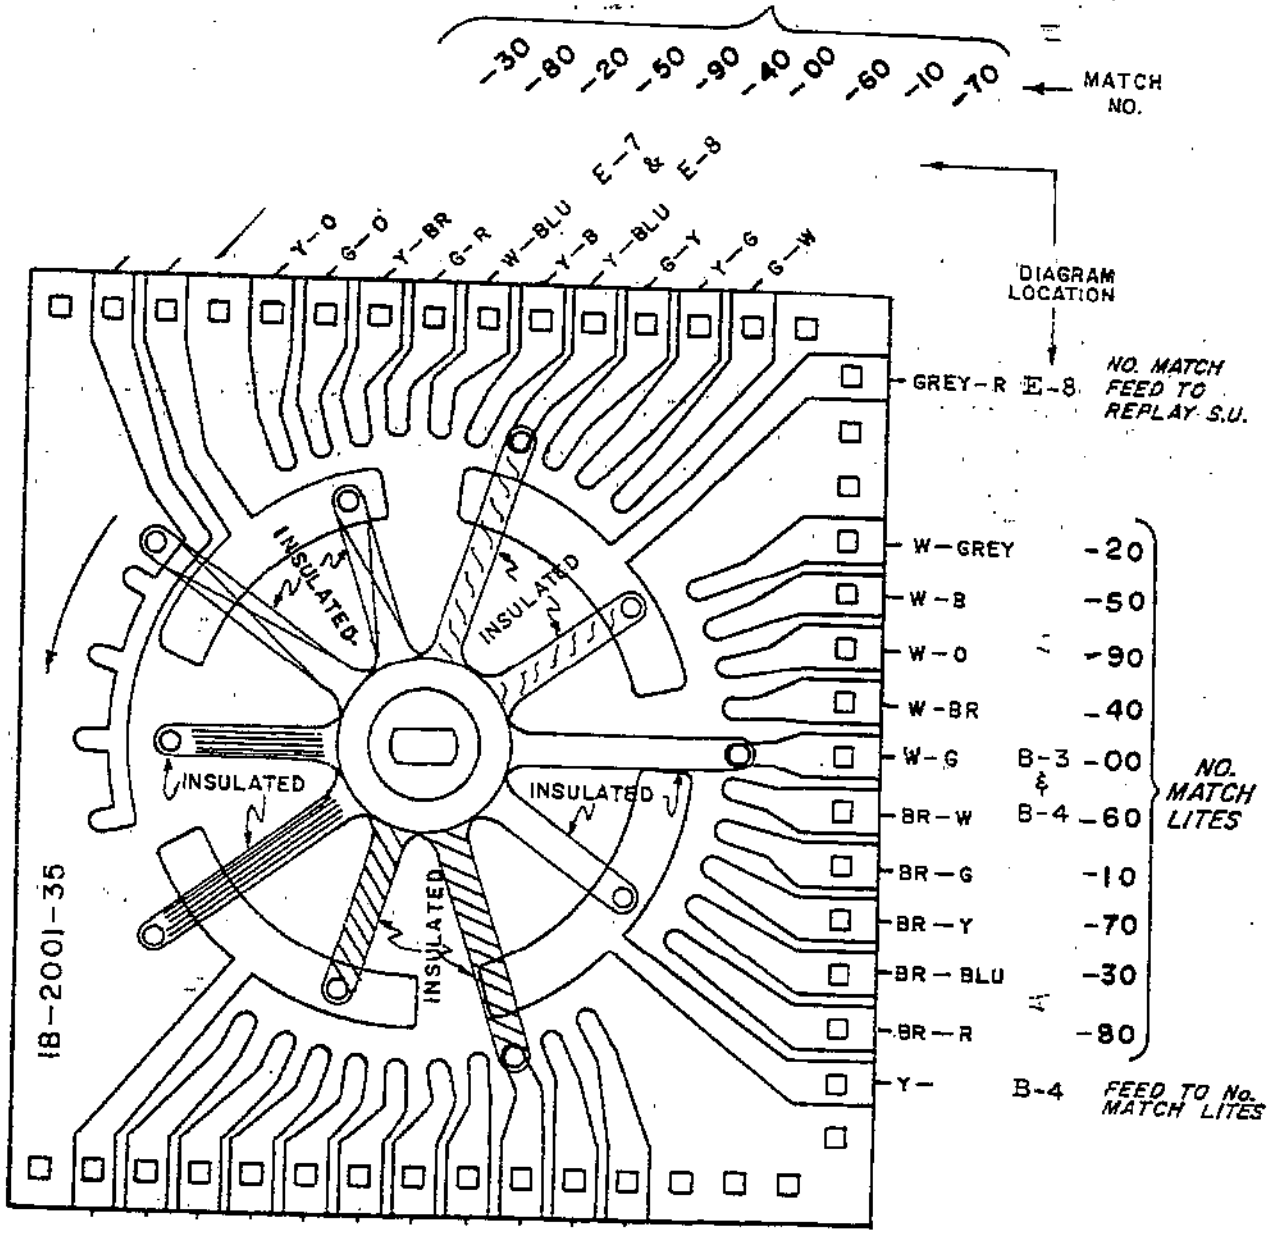

BONUS UNIT

THIS UNIT STEPS UP EACH TIME THE ADVANCE RELAY IS PULSED.

ALSO, AFTER THIS UNIT HAS BEEN RESET TO ZERO, THE STEP-UP COIL IS ENERGIZED ONCE BY SCORE MOTOR CAM SWITCH 6A, THRU BONUS UNIT WIPER FINGERS.

THE RESET COIL IS ENERGIZED BY BONUS RELAY, THRU DOUBLE BONUS RELAY AND SCORE MOTOR CAM SWITCH 4C OR IMPULSE CAM SWITCH A.


| | | |
|-------|--------|-----|
| BONUS | 1000 | B-6 |
| | 2000 | |
| | 3000 | |
| | 4000 | |
| | 5000 | |
| LITES | 6000 | |
| | 7000 | |
| | 8000 | |
| | 9000 | |
| | 10,000 | B-7 |

TO BONUS UNIT S.U. COIL
THRU CAM SWITCH 6A.


PULSES OUTHOLE RELAY
AT CAM SWITCH 6B.

D-13
SER # (B-BLT)
W-R


VIEW LOOKING AT WIPER FINGER SIDE,
WITH WIPER IN ZERO POSITION.

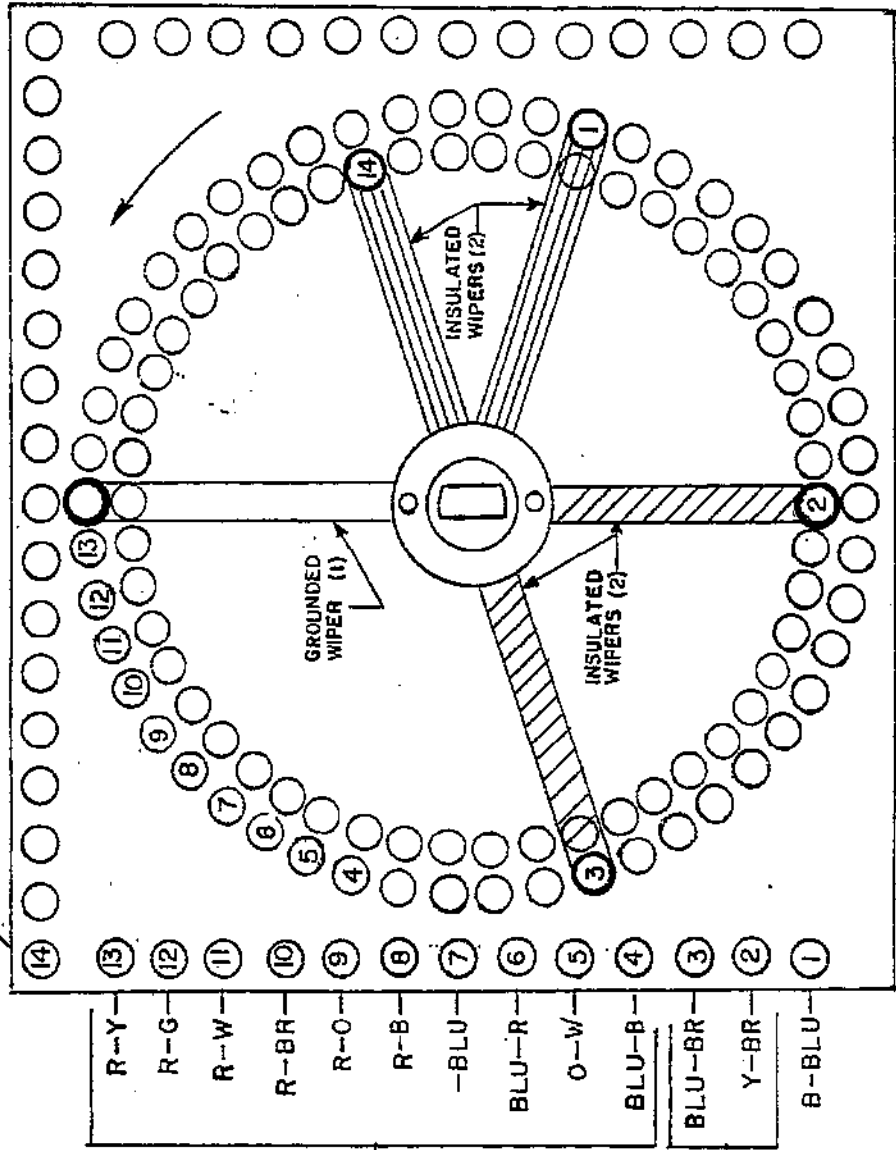

RELAY BANK SWS.

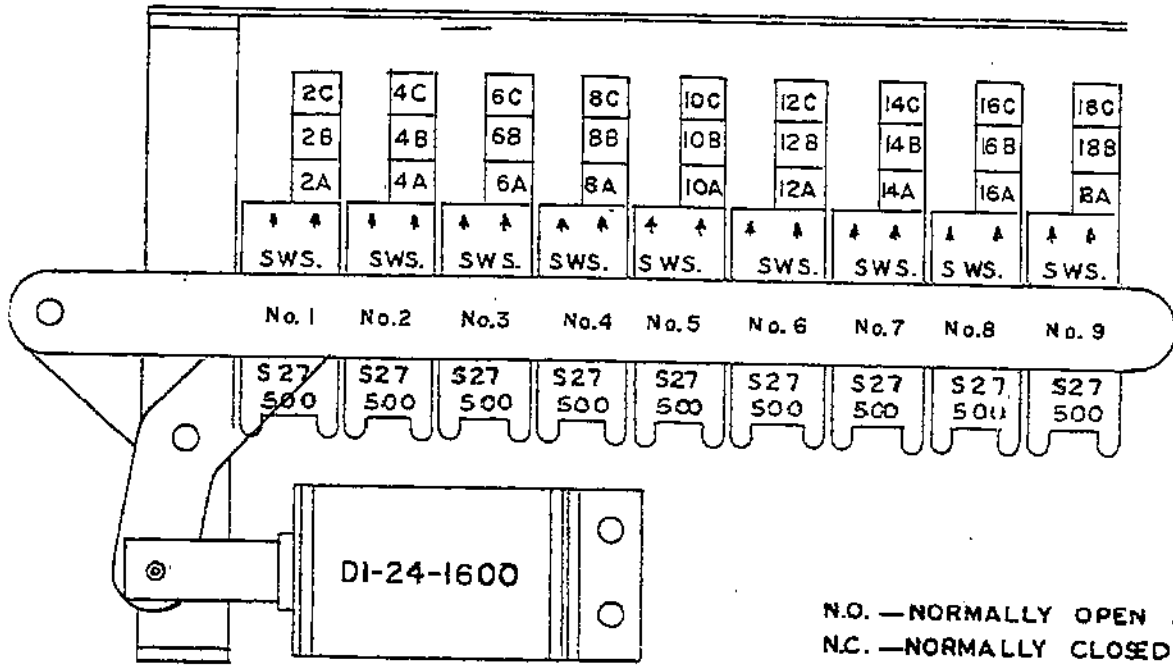


N.O. — NORMALLY OPEN SWITCH
 N.C. — NORMALLY CLOSED SWITCH
 M&B — MAKE AND BREAK SWITCH

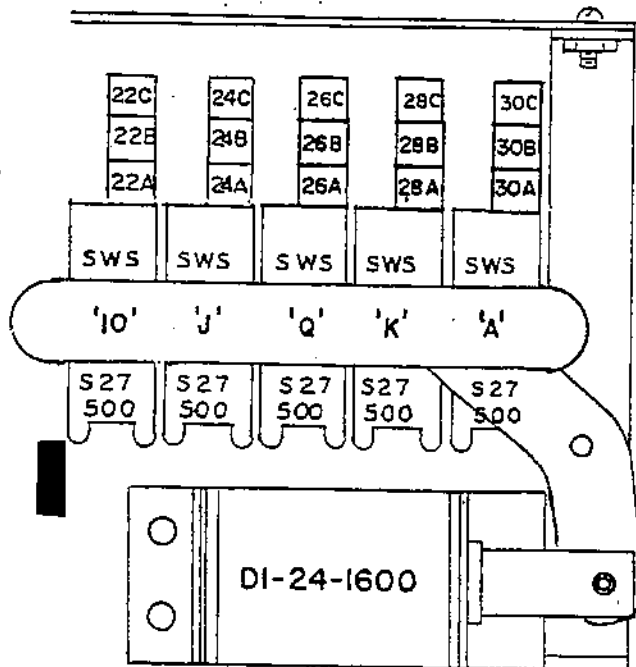

| RELAY | SW. | WIRE COLORS | DIAGRAM LOCATION | TYPE | SWITCH OPERATION |
|----------------|-----|---------------------|------------------|------|---|
| NO. 1 RELAY | 2C | -J- R-Y R-G | E-18 | M&B | OPENS TO NO. 1 RELAY COIL AND CLOSES TO 50 POINT RELAY (THRU NO. 1 ROLLOVER BUTTON SWITCH). |
| | 2B | -O- -W- | A-7 | N.C. | TO NO. 1 LITE |
| | 2A | B-W -J- | C-12 | N.O. | IN SERIES WITH SWITCH 4A ON NO. 2 RELAY. |
| NO. 2 RELAY | 4C | -J- R-W R-G | E-18 | M&B | OPENS TO NO. 2 RELAY COIL AND CLOSES TO 50 POINT RELAY (THRU NO. 2 ROLLOVER BUTTON SWITCH). |
| | 4B | O-R -W- | A-7 | N.C. | TO NO. 2 LITE. |
| | 4A | -J- -J- | D-12 | N.O. | IN SERIES WITH SWITCH 6A ON NO. 3 RELAY. |
| NO. 3 RELAY | 6C | -J- R-O R-G | E-19 | M&B | OPENS TO NO. 3 RELAY COIL AND CLOSES TO 50 POINT RELAY (THRU NO. 3 ROLLOVER BUTTON SWITCH). |
| | 6B | O-BLU -W- | A-8 | N.C. | TO NO. 3 LITE. |
| | 6A | -J- -J- | D-12 | N.O. | IN SERIES WITH SWITCH 8A ON NO. 4 RELAY. |
| NO. 4 RELAY | 8C | -J- R-B R-G | E-19 | M&B | OPENS TO NO. 4 RELAY COIL AND CLOSES TO 50 POINT RELAY (THRU NO. 4 ROLLOVER BUTTON SWITCH). |
| | 8B | O-G -W- | A-8 | N.C. | TO NO. 4 LITE. |
| | 8A | -J- -J- | D-12 | N.O. | IN SERIES WITH SWITCH 10A ON NO. 5 RELAY. |
| NO. 5 RELAY | 10C | -J- BLU-Y R-G | E-19 | M&B | OPENS TO NO. 5 RELAY COIL AND CLOSES TO 50 POINT RELAY (THRU NO. 5 ROLLOVER BUTTON SWITCH). |
| | 10B | O-W -W- | A-8 | N.C. | TO NO. 5 LITE. |
| | 10A | -J- -J- | D-12 | N.O. | IN SERIES WITH SWITCH 12A ON NO. 6 RELAY. |

| RELAY | SW. | WIRE COLORS | DIAGRAM LOCATION | TYPE | SWITCH OPERATION |
|-----------------|-----|---------------------|------------------|------|--|
| NO. 6 RELAY | 12C | -J- BLU-O R-G | E-19 | M&B | OPENS TO NO. 6 RELAY COIL AND CLOSSES TO 50 POINT RELAY (THRU NO. 6 ROLLOVER BUTTON SWITCH). |
| | 12B | O-B -W- | A-8 | N.C. | TO NO. 6 LITE. |
| | 12A | -J- -J- | D-12 | N.O. | IN SERIES WITH SWITCH 14A ON NO. 7 RELAY. |
| NO. 7. RELAY | 14C | -J- Y-BLU R-G | E-19 | M&B | OPENS TO NO. 7 RELAY COIL AND CLOSSES TO 50 POINT RELAY (THRU NO. 7 ROLLOVER BUTTON SWITCH). |
| | 14B | B-R -W- | A-8 | N.C. | TO NO. 7 LITE. |
| | 14A | -J- -J- | E-12 | N.O. | IN SERIES WITH SWITCH 16A ON NO. 8 RELAY. |
| NO. 8 RELAY. | 16C | -J- Y-G R-G | E-19 | M&B | OPENS TO NO. 8 RELAY COIL AND CLOSSES TO 50 POINT RELAY (THRU NO. 8 ROLLOVER BUTTON SWITCH). |
| | 16B | B-Y -W- | A-8 | N.C. | TO NO. 8 LITE. |
| | 16A | -J- -J- | E-12 | N.O. | IN SERIES WITH SWITCH 18A ON NO. 9 RELAY. |
| NO. 9 RELAY | 18C | -J- Y-O R-G | E-19 | M&B | OPENS TO NO. 9 RELAY COIL AND CLOSSES TO 50 POINT RELAY (THRU NO. 9 ROLLOVER BUTTON SWITCH). |
| | 18B | B-G -W- | A-8 | N.C. | TO NO. 9 LITE. |
| | 18A | -J- R-O | E-12 | N.O. | IN SERIES CIRCUIT TO ENERGIZE "1 TO 9 RESET RELAY". (SEE SWITCH 2A ON NO. 1 RELAY). |
| 10 RELAY | 22C | G-R -J- | E-20 | N.C. | TO 10 RELAY COIL, FROM 10 TARGET SWITCH. |
| | 22B | GRAY-R -W- | A-8 | N.O. | TO '10' LITE. |
| | 22A | B-W -J- | C-12 | N.O. | IN SERIES WITH SWITCH 24A ON 'J' RELAY. |

| RELAY | SW. | WIRE COLORS | DIAGRAM LOCATION | TYPE | SWITCH OPERATION |
|--------------|-----|-----------------|------------------|------|---|
| 'J' RELAY | 24C | G-C -J- | E-20 | N.C. | TO 'J' RELAY COIL, FROM 'J' TARGET SWITCH. |
| | 24B | GRAY-BLU -W- | A-8 | N.O. | TO 'J' LITE. |
| | 24A | -J- -J- | D-12 | N.O. | IN SERIES WITH SWITCH 26A ON 'Q' RELAY. |
| 'Q' RELAY | 26C | W-G -J- | E-20 | N.C. | TO 'Q' RELAY COIL, FROM 'Q' TARGET SWITCH. |
| | 26B | GRAY-Y -W- | A-9 | N.O. | TO 'Q' LITE. |
| | 26A | -J- -J- | D-12 | N.O. | IN SERIES WITH SWITCH 28A ON 'K' RELAY. |
| 'K' RELAY | 28C | BR-G -J- | E-20 | N.C. | TO 'K' RELAY COIL, FROM 'K' TARGET SWITCH. |
| | 28B | GRAY-G -W- | A-9 | N.O. | TO 'K' LITE. |
| | 28A | -J- -J- | E-12 | N.O. | IN SERIES WITH SWITCH 30A ON 'A' RELAY. |
| 'A' RELAY | 30C | BR-B -J- | E-20 | N.C. | TO 'A' RELAY COIL, FROM 'A' TARGET SWITCH |
| | 30B | GRAY-BR -W- | A-9 | N.O. | TO 'A' LITE. |
| | 30A | -J- R-BLU | E-12 | N.O. | IN SERIES CIRCUIT TO ENERGIZE "10 TO ACE RESET RELAY". (SEE SWITCH 22A ON '10' RELAY. |
| | | | | | |

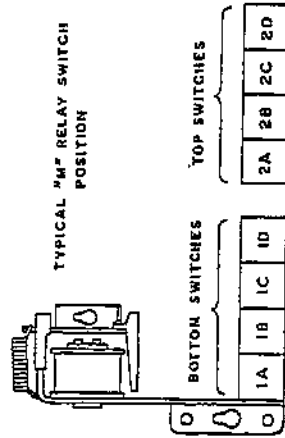

LOCK

IS ENERGIZED BY 5/2 RELAY, LEFT FLIPPER SWITCH OR SCORE MOTOR CAM SWITCH 6B, THRU HORNUS MOTOR CAM SWITCH 5A.


OUTHOLE

IS ENERGIZED BY SCORE MOTOR CAM SWITCH 6B, THRU HORNUS UNIT DISC (IN ZERO POSITION).

PLAYER RESET

IS ENERGIZED BY BALL COUNT UNIT END-OF-STROKE SWITCH. IT THEN HOLDS IN THRU SCORE MOTOR INDEX CAM SWITCH D.

A.C. RELAYS & SWITCHES LOCATED ON MECHANISM PANEL

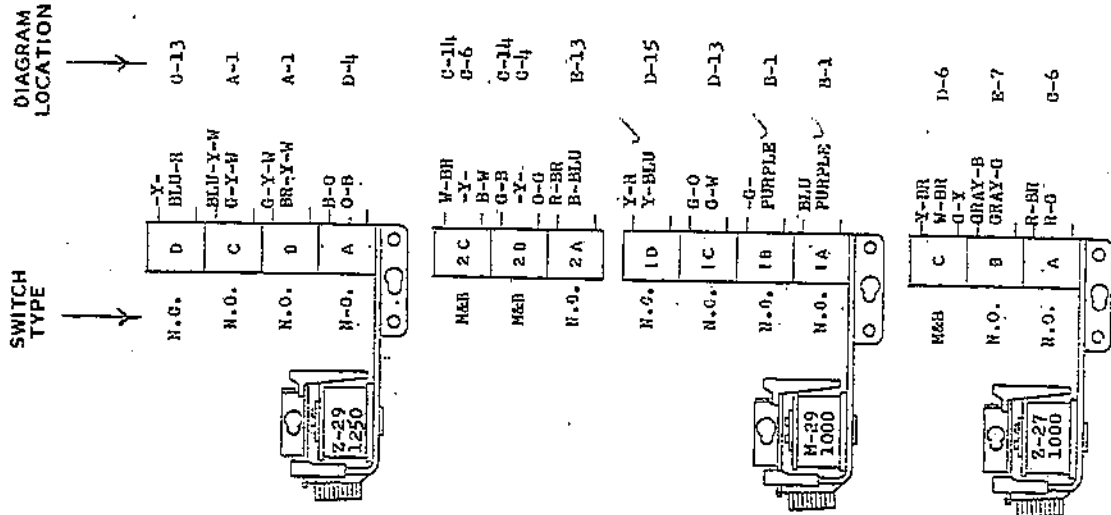

ENERGIZES GAME-OVER RELAY (TRIP COIL).

6 VOLTS FROM TRANSFORMER TO LITES.

6 VOLTS FROM TRANSFORMER TO LITES.

HOLD CIRCUIT TO THIS RELAY, THRU CABINET BOTTOM KICK-OFF SWITCH.

OPENS IN HOLD CIRCUIT TO SET-UP, DOUBLE, TRIPLE & TILT RELAYS AND CLOSSES IN SERIES WITH SWITCH E ON EXTRA BALL RE.

OPENS IN HOLD CIRCUIT TO BALL INDEX RELAY AND CLOSSES TO RUN SCORE MOTOR.

IN HOLD CIRCUIT TO THIS RELAY.

IN HOLD CIRCUIT TO SPECIAL RELAY.

IN CIRCUIT TO BONUS RELAY, THRU OUTHOLE SWITCH.

ENERGIZES 10 TO AGE RELAY BANK RESET COIL, THRU SCORE MOTOR CAM SWITCH 1B.

ENERGIZES 1 TO 9 RELAY BANK RESET COIL, THRU SCORE MOTOR CAM SWITCH 3A.


OPENS IN CIRCUIT TO PLAYER UNIT S.U. COIL AND CLOSSES TO PLAYER UNIT RESET COIL.

IN NUMBER MATCH CIRCUIT TO REPLAY S.U. COIL.

IN HOLD CIRCUIT TO THIS RELAY.

RESET

IS ENERGIZED BY COIN RELAY, THRU SWITCH ON GAME-OVER RELAY.

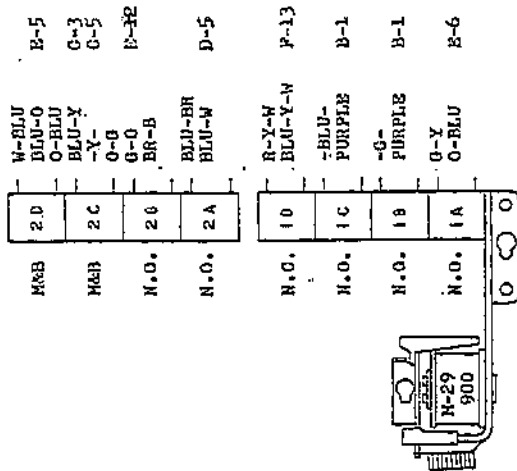

OPENS IN CIRCUIT TO COIN UNIT S.U. COIL AND CLOSES TO RESET COILS ON COIN, BALL COUNT AND GAME-OVER.

OPENS IN CIRCUIT TO REPLAY RELAY AND COIN LOCKOUT COIL---CLOSES TO RUN SCORE MOTOR.

ENERGIZES BONUS RELAY, THRU SCORE MOTOR INDEX CAM SWITCH D. IN HOLD CIRCUIT TO THIS RELAY.

OPENS MOST CIRCUITS TO PLAYFIELD SWITCHES.


ENERGIZES 1-9 RELAY BANK RESET COIL, THRU SCORE MOTOR CAM SWITCH 3A.

ENERGIZES 10 TO ACE RELAY BANK RESET COIL, THRU SCORE MOTOR CAM SWITCH 1B.

IN CIRCUIT TO PLAYER UNIT RESET COIL.

REPLAY

IS ENERGIZED BY REPLAY BUTTON, THRU ZERO SWITCH ON THAT UNIT.

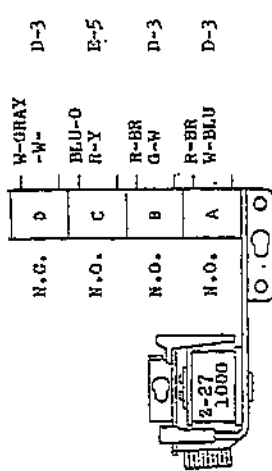

OPENS CIRCUIT TO COIN LOCKOUT COIL.


PULSES REPLAY UNIT RESET COIL, THRU SCORE MOTOR CAM SWITCH 1D.

ENERGIZES COIN RELAY.

IN HOLD CIRCUIT TO THIS RELAY.

COIN

IS ENERGIZED BY COIN SWITCH OR REPLAY RELAY---ALSO BY 5¢ RELAY, THRU SWITCH ON ALTERNATOR UNIT---ALSO BY 25¢ RELAY IF GAME IS ADJUSTED TO 16 PLAYS FOR 25¢.

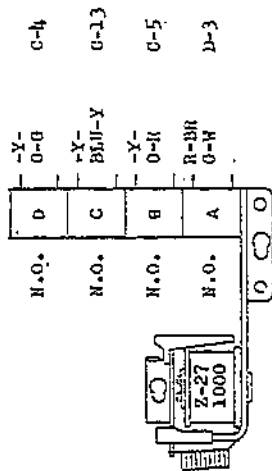

RUNS SCORE MOTOR.


TRIPS GAME-OVER RELAY THRU ZERO SWITCH ON PLAYER UNIT OR BALL COUNT UNIT.

ENERGIZES RESET RELAY, THRU SWITCH C ON GAME-OVER RELAY.

IN HOLD CIRCUIT TO THIS RELAY.

EXTRA BALL


IS ENERGIZED BY RIGHT BOTTOM ROLLOVER SWITCH, THRU SWITCH ON SET-UP RELAY--- ALSO BY HI-SCORE CIRCUIT, THRU "REPLAY-EXTRA BALL" ADJUSTMENT JACK.

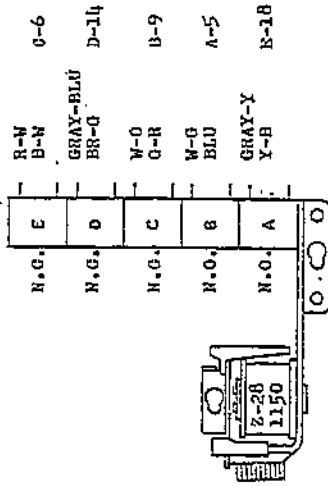

IN SERIES WITH SWITCH B ON BALL INDEX RELAY.
 OPENS CIRCUIT TO ENERGIZE BALL INDEX RELAY.
 IN CIRCUIT TO "EXTRA BALL WHEN LIT" LITE.
 TO "SHOOT AGAIN" LITES.
 IN HOLD CIRCUIT TO THIS RELAY.

GAME-OVER


IS ENERGIZED BY SCORE MOTOR GAM SWITCH 1D, THRU SWITCHES ON COIN RELAY AND RESET RELAY.
 TRIP COIL IS ENERGIZED BY LOCK RELAY OR WIPER FINGER ON BALL COUNT UNIT---ALSO BY COIN RELAY, THRU A ZERO SWITCH ON EITHER THE BALL COUNT UNIT OR PLAYER UNIT.

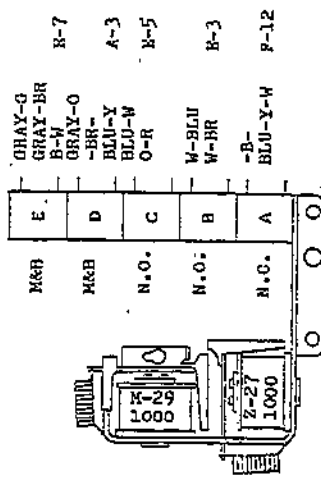

OPENS IN HI-SCORE CIRCUITS AND CLOSSES TO NUMBER MATCH CIRCUITS.
 OPENS TO "PLAYER UP" LITES, AND CLOSSES TO "GAME-OVER" AND "NUMBER MATCH" LITES.
 CIRCUIT TO RESET RELAY, THRU SWITCH ON COIN RELAY.
 IN CIRCUIT TO REPLAY RELAY.
 OPENS MOST CIRCUITS TO PLAYFIELD SWITCHES.

BALL INDEX


IS ENERGIZED BY 10 POINT, 100 POINT OR 1,000 POINT RELAY, THRU SWITCH ON EXTRA BALL RELAY---ALSO BY TILT RELAY.

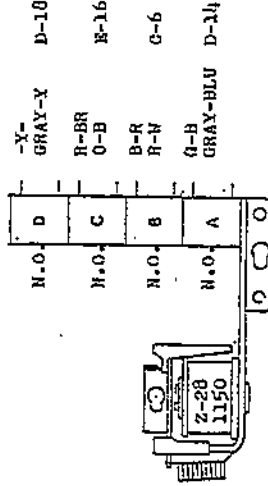

IN SERIES WITH SWITCH A ON EXTRA BALL RELAY.
 IN CIRCUIT TO 1,000 POINT RELAY, THRU SWITCH 1B ON BONUS RELAY.
 IN CIRCUIT TO BALL COUNT UNIT S.U.---ALSO IN SERIES WITH SWITCH ON PLAYER RESET RELAY.
 IN HOLD CIRCUIT TO THIS RELAY.

TILT


IS ENERGIZED BY PLUMB BOB TILT, BALL ROLL-DOWN TILT OR PLAYFIELD VIBRATION TILT SWITCH.

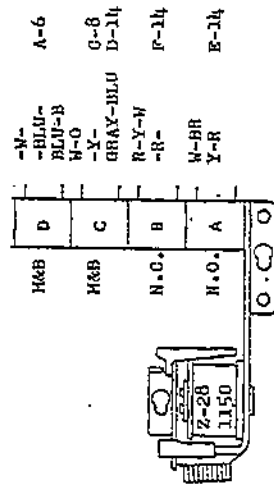

OPENS IN CIRCUIT TO MOST PLAYFIELD LITES AND CLOSSES TO "TILT" LITE.
 OPENS IN HI-SCORE CIRCUIT TO REPLAY S.U. AND CLOSSES TO ENERGIZE BALL INDEX RELAY.
 OPENS CIRCUITS TO MOST PLAYFIELD SWITCHES.
 HOLD CIRCUIT TO THIS RELAY, THRU SWITCH ON GUTTHOLE RELAY.

25¢


IS ENERGIZED BY 25¢ COIN SWITCH.

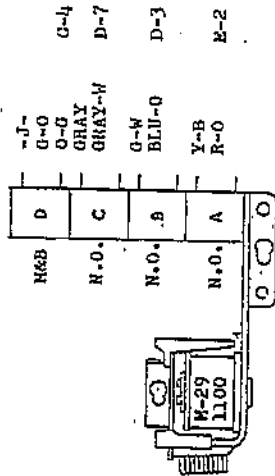

OPENS IN CIRCUIT TO KNOCKER COIL AND CLOSES TO RUN SCORE MOTOR.
 PULSES REPLAY S.U. COIL, THRU IMPULSE GAM SWITCH B.
 ENERGIZES COIN RELAY IN '6 PLAYS FOR 25¢ ADJUSTMENT.
 IN HOLD CIRCUIT TO THIS RELAY.

10¢


IS ENERGIZED BY 10¢ COIN SWITCH, IF 10¢ ADJUSTMENT JACK IS IN '2 PLAYS" OR '3 PLAYS" POSITION.

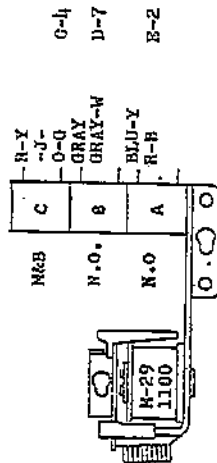

OPENS IN CIRCUIT TO KNOCKER COIL AND CLOSES TO RUN SCORE MOTOR.
 PULSES REPLAY S.U. COIL, THRU IMPULSE GAM SWITCH B.
 IN HOLD CIRCUIT TO THIS RELAY.

5¢

IS ENERGIZED BY 5¢ COIN SWITCH.

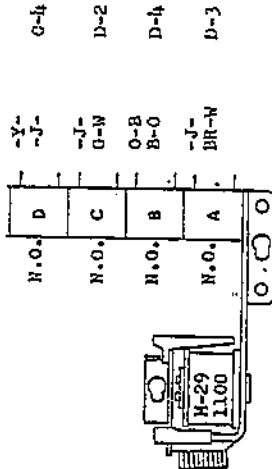


ENERGIZES ALTERNATOR UNIT S.U. COIL.
 ENERGIZES COIN RELAY, THRU SWITCH ON ALTERNATOR UNIT.
 ENERGIZES LOCK RELAY.
 IN HOLD CIRCUIT TO THIS RELAY.

LOCATED ON PLAYFIELD

10 TO ACE RESET


IS ENERGIZED, AT INDEX GAM SWITCH C, BY A SERIES CIRCUIT THRU SWITCHES ON 10 RELAY, J RELAY, Q RELAY, K RELAY AND A RELAY.

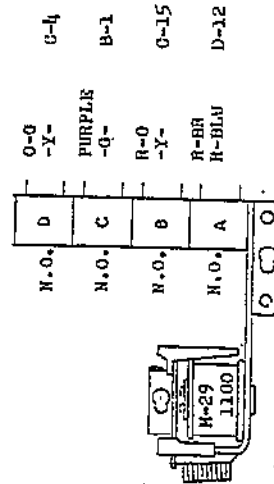

RUNS SCORE MOTOR.
 ENERGIZES 10 TO ACE RELAY BANK RESET COIL, THRU SCORE MOTOR GAM SWITCH 1B.
 IN CIRCUIT TO ENERGIZE SET-UP RELAY AND SPECIAL RELAY.
 IN HOLD CIRCUIT TO THIS RELAY.

1 TO 9 RESET


IS ENERGIZED, AT INDEX CAM SWITCH G, BY A SERIES CIRCUIT THRU SWITCHES ON NO. 1 THRU NO. 9 RELAYS.

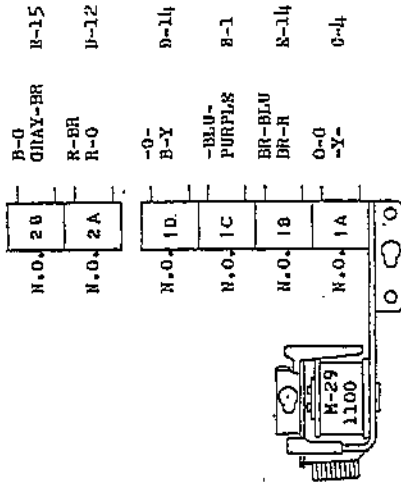

ENERGIZES REPLAY S.U. COIL, THRU SWITCH B ON TRIPLE BONUS RELAY.
 IN HOLD CIRCUIT TO THIS RELAY.
 ENERGIZES TRIPLE BONUS RELAY, THRU SWITCH C ON DOUBLE BONUS RELAY.
 ENERGIZES 1 TO 9 RELAY BANK RESET COIL, THRU SCORE MOTOR CAM SWITCH 3A.
 ENERGIZES DOUBLE BONUS RELAY, THRU SCORE MOTOR CAM SWITCH 4A.
 RUNS SCORE MOTOR.

SPECIAL


IS ENERGIZED, AT CAM SWITCH 2B, THRU 10 TO ACE RESET RELAY AND SET-UP RELAY.

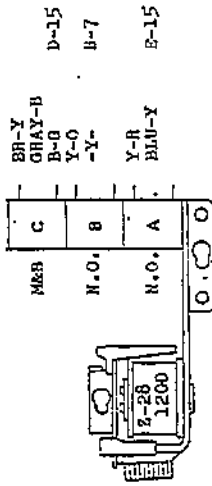

OPENS IN CIRCUIT TO 1,000 POINT RELAY AND CLOSSES TO REPLAY S.U. COIL OR 5,000 RELAY.
 TO "RIGHT SIDE ROLLOVER" LITE.
 IN HOLD CIRCUIT TO THIS RELAY.

SET-UP


IS ENERGIZED, AT CAM SWITCH 4H, THRU SWITCH ON 10 TO ACE RESET RELAY.

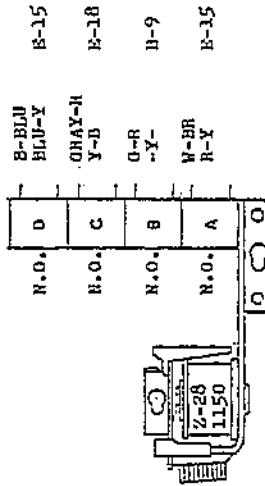

ENERGIZES SPECIAL RELAY, THRU SWITCH B ON "10 TO ACE RESET RELAY".
 ENERGIZES EXTRA BALL RELAY, THRU RIGHT BOTTOM ROLLOVER SWITCH.
 IN SERIES WITH SWITCH C ON EXTRA BALL RELAY.
 HOLD CIRCUIT TO THIS RELAY, THRU SWITCH ON OUTHOLE RELAY.

TRIPLE BONUS


IS ENERGIZED, AT CAM SWITCH 3C, BY SWITCHES ON 1 TO 9 RESET RELAY AND DOUBLE BONUS RELAY.

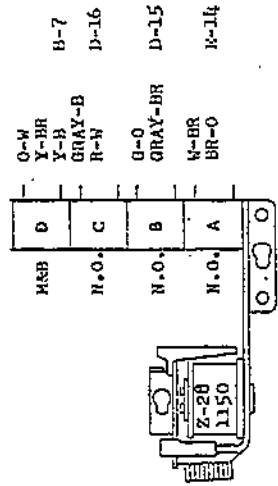

OPENS IN CIRCUIT TO "DOUBLE BONUS" LITE AND CLOSSES TO "TRIPLE BONUS" LITE.
 IN CIRCUIT TO 1,000 POINT RELAY, THRU SWITCH 1C ON BONUS RELAY.
 IN SERIES WITH SWITCH 2B ON 1 TO 9 RESET RELAY.
 HOLD CIRCUIT TO THIS RELAY, THRU SWITCH ON OUTHOLE RELAY.

DOUBLE BONUS


IS ENERGIZED BY GAM SWITCH 1A, THRU SWITCH ON 1 TO 9 RESET RELAY.

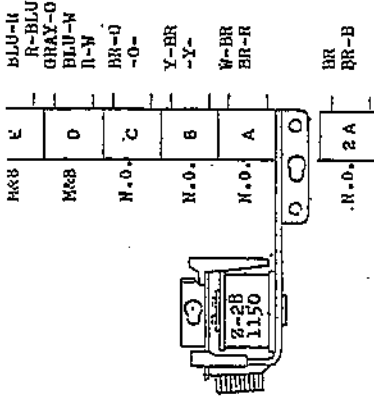

D-12 IN CIRCUIT TO BONUS UNIT RESET COIL, THRU SWITCH 1D ON BONUS RELAY.
 O-16 IN CIRCUIT TO 1,000 POINT RELAY, THRU SWITCH 1B ON BONUS RELAY.
 B-14 ENERGIZES TRIPLE BONUS RELAY, THRU SWITCH ON 1 TO 9 RESET RELAY.
 B-7 IN SERIES WITH SWITCH D ON TRIPLE BONUS RELAY.
 E-15 HOLD CIRCUIT TO THIS RELAY, THRU SWITCH ON OUTHOLE RELAY.

BONUS


IS ENERGIZED, DURING RESET CYCLE, BY SCORE MOTOR INDEX GAM SWITCH D, THRU SWITCH ON RESET RELAY. DURING PLAY, IT IS ENERGIZED BY OUTHOLE SWITCH, THRU SWITCH 1C ON OUTHOLE RELAY.

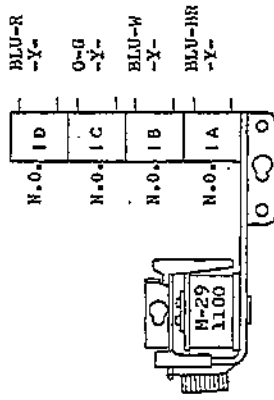

E-13 HOLD CIRCUIT TO THIS RELAY, THRU ZERO SWITCH ON BONUS UNIT.
 C-12 IN SERIES WITH SWITCH E ON DOUBLE BONUS RELAY.
 C-5 RUNS SCORE MOTOR.
 C-16 IN SERIES WITH SWITCH D ON DOUBLE BONUS RELAY---ALSO SWITCH C ON TRIPLE BONUS RE.
 C-5 IN HOLD CIRCUIT TO RESET RELAY.

5000


IS ENERGIZED, ONLY IN "EXTRA BALL" POSITION, BY RIGHT SIDE ROLLOVER SWITCH, THRU SPECIAL RELAY---ALSO BY TRIPLE BONUS RELAY, THRU 1 TO 9 RESET RELAY.

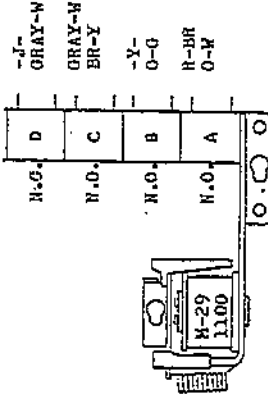

C-17 IN SERIES WITH SWITCH B ON 50 POINT RELAY.
 D-15 PULSES 1,000 POINT RELAY, THRU IMPULSE GAM SWITCH B.
 C-5 RUNS SCORE MOTOR.
 C-15 IN HOLD CIRCUIT TO THIS RELAY.

50


IS ENERGIZED BY NO. 1 THRU NO. 9 ROLLOVER BUTTON SWITCHES.

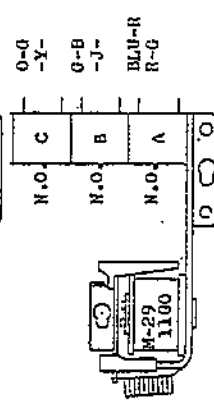

C-5 RUNS SCORE MOTOR.
 C-17 IN CIRCUIT TO PULSE 10 POINT RELAY, THRU SWITCH D ON 5,000 RELAY.
 E-20 HOLD CIRCUIT TO THIS RELAY, THRU SCORE MOTOR GAM SWITCH 5B.

ADVANCE

IS PULSED BY LEFT OR RIGHT TOP ROLLOVER SWITCHES, LEFT OR RIGHT TOP TARGET SWITCHES, OR LEFT SIDE TARGET SWITCH.

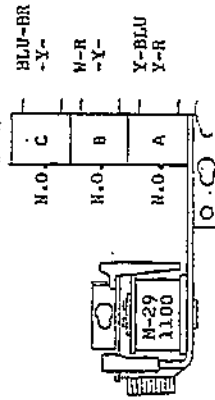


C-12 ENERGIZES BONUS UNIT S.U. COIL.
 C-17 PULSES 100 POINT RELAY.
 E-18 HOLD CIRCUIT TO THIS RELAY, THRU END-OF-STROKE SWITCH ON BONUS UNIT.

LOCATED IN BACKBOX

10 POINT


IS PULSED BY (2) KICKER SWITCHES, 50 POINT RELAY, OR 10 THRU AGE TARGET SWITCHES.

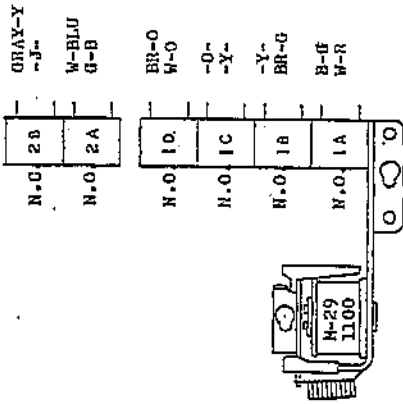

D-18 IN HOLD CIRCUIT TO EXTRA BALL RELAY.
 K-17 IN HOLD CIRCUIT TO THIS RELAY.
 C-9 PULSES 10 POINT DRUM UNITS, THRU PLAYER UNIT DISC.
 C-21 ENERGIZES NUMBER MATCH S.U. COIL AND MEDIUM CHIME COIL.
 C-14 IN SERIES WITH SWITCH D ON EXTRA BALL RELAY.
 E-17 PULSES 100 POINT RELAY, THRU 9TH POSITION SWITCHES ON 10 POINT DRUM UNITS.

100 POINT


IS PULSED BY (3) JET BUMPER SWITCHES OR BY ADVANCE RELAY.

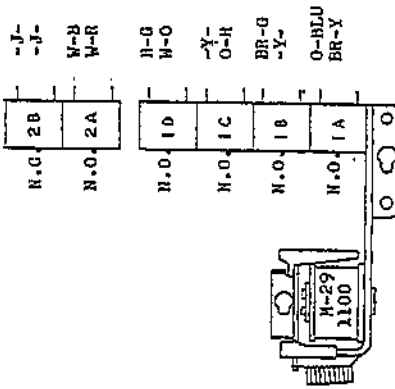

C-18 IN SERIES WITH SWITCH 2B ON 10 POINT RELAY.
 E-17 IN HOLD CIRCUIT TO THIS RELAY.
 C-10 PULSES 100 POINT DRUM UNITS, THRU PLAYER UNIT DISC.
 C-21 PULSES SMALL CHIME COIL.
 G-14 IN SERIES WITH SWITCH D ON EXTRA BALL RELAY.
 E-16 PULSES 1,000 POINT RELAY, THRU 9TH POSITION SWITCH ON 100 POINT DRUM UNITS.

1,000 POINT

IS PULSED BY:
 1. TOP ROLLOVER BUTTON SWITCH.
 2. SIDE TARGET SWITCH.
 3. 5000 RELAY.
 4. (3) BOTTOM ROLLOVER SWITCHES.
 5. RIGHT SIDE ROLLOVER SWITCH, THRU SPECIAL RELAY.
 6. BONUS RELAY, THRU DOUBLE BONUS OR TRIPLE BONUS RELAYS.

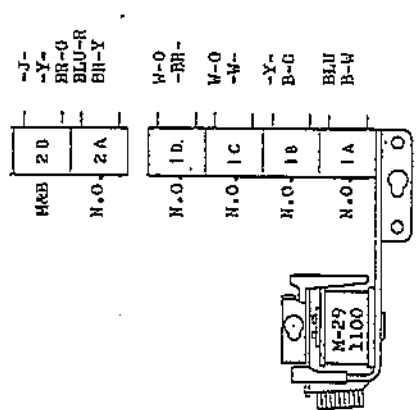


C-16 OPENS IN SERIES WITH SWITCH 2B ON 100 POINT RELAY, AND CLOSES IN SERIES WITH SWITCH D ON EXTRA BALL RELAY.
 C-14 IN HOLD CIRCUIT TO THIS RELAY.
 E-17 PULSES 10,000 POINT DRUM UNITS, THRU 9TH POSITION SWITCHES ON 1,000 POINT DRUM UNITS.
 C-10 PULSES 1,000 POINT DRUM UNITS, THRU PLAYER UNIT DISC.
 C-21 PULSES LARGE CHIME COIL.

P-8 IN HI-SCORE CIRCUIT TO REPLAY S.U. COIL OR EXTRA BALL RELAY.

142 RESET


IS PULSED BY "FORWARD IMPULSE GAN" SWITCH A, THRU SWITCH 2A ON RESET RELAY.

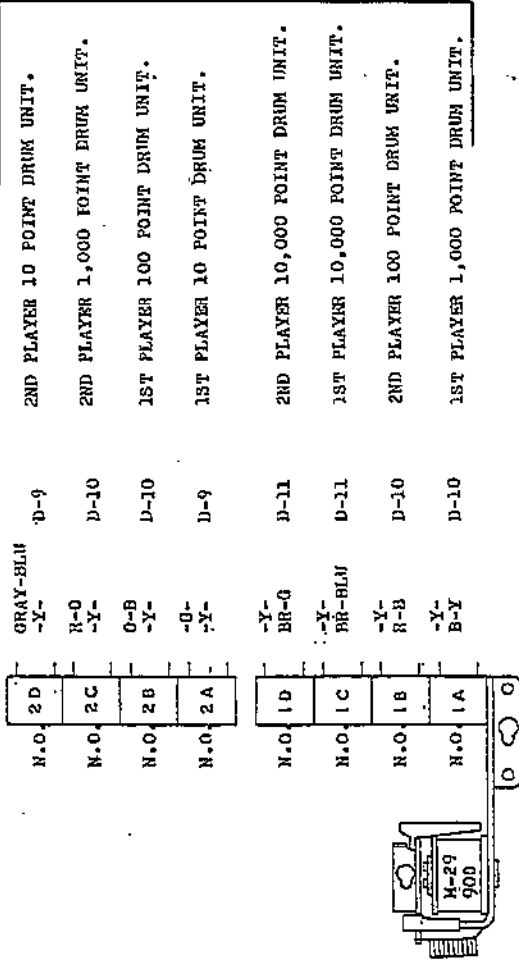

THESE SWITCHES PULSE THE INDICATED DRUM UNIT, THRU ZERO SWITCH ON THAT UNIT.

344 RESET

IS PULSED BY IMPULSE GAN SWITCH A, THRU SWITCH 2A ON RESET RELAY.

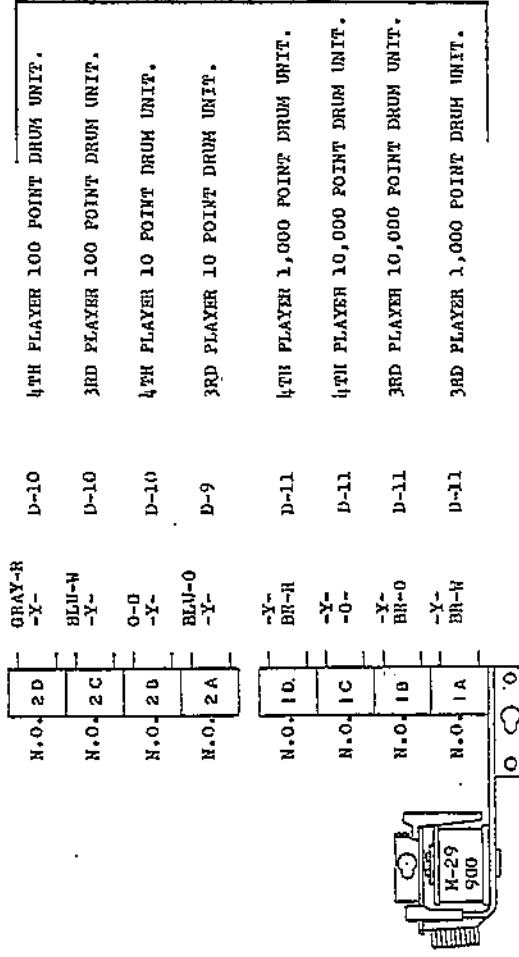

THESE SWITCHES PULSE THE INDICATED DRUM UNIT, THRU ZERO SWITCH ON THAT UNIT.